ORDER NO. AD9205130C8

Service Manual

Stereo Integrated Amplifier

Amplifier

SU-VX920

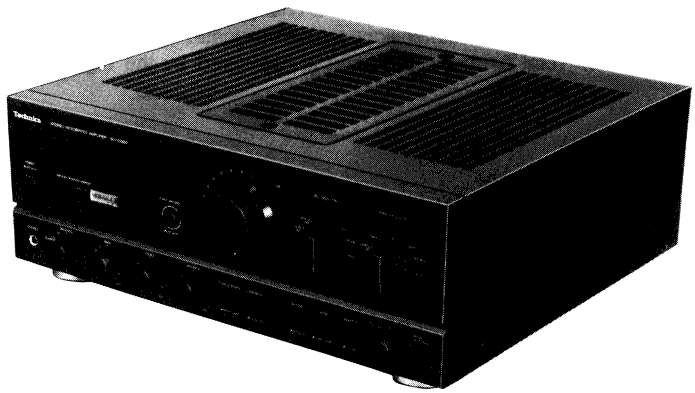

Colour

(K)	Black Type

Areas

Suffix for Model No.	Area	Colour
(EB)	Great Britain	(K)
(EG)	Europe	
(GN)	Oceania	

SPECIFICATIONS
(DIN 45 500)

■ MAIN AMP. SECTION
(POWER AMP. DIRECT input)

20 Hz~20 kHz continuous power output
both channels driven: 2×110 W (8Ω)
1 kHz continuous power output
both channels driven (THD: 1%): 2×130 W (8Ω)
2×180 W (4Ω)
63 Hz~12.5 kHz continuous power output
both channels driven (THD: 0.7%): 2×120 W (8Ω)
2×160 W (4Ω)
Total harmonic distortion
rated power at 20 Hz~20 kHz: 0.007% (8Ω)
half power at 20 Hz~20 kHz: 0.005% (8Ω)
half power at 1 kHz: 0.0009% (8Ω)
0.002% (4Ω)
Intermodulation distortion (50 Hz: 7 kHz=4:1, SMPTE)
rated power: 0.007% (8Ω)
Residual hum and noise: 0.2 mV
Damping factor: 80 (8Ω)
40 (4Ω)
Headphones output level/Impedance: 635 mV/330Ω
Load impedance
A or B, BI-WIRING: 4~16Ω
A and B: 8~16Ω

■ PRE AMP. SECTION

Input sensitivity/Impedance
PHONO MM: 2.5 mV/47 kΩ
MC: 250 μV/220Ω
TUNER, CD, AUX, TAPE 1, TAPE 2/DAT: 150 mV/22 kΩ
ADAPTOR: 150 mV/22 kΩ
POWER AMP. DIRECT: 1 V/18 kΩ

Phono maximum input voltage (1 kHz, RMS)
MM: 170 mV
MC: 15 mV
S/N (Rated power, 4Ω)
PHONO MM: 79 dB (86 dB, IHF '66)
MC: 68 dB (68 dB, IHF '66)
TUNER, CD, AUX, TAPE 1, TAPE 2/DAT:
97 dB (100 dB, IHF '66)
ADAPTOR: 97 dB (100 dB, IHF '66)
POWER AMP. DIRCET: 106 dB (115 dB, IHF '66)
S/N at −26 dB power (4Ω)
PHONO MM: 77 dB
MC: 67 dB
TUNER, CD, AUX, TAPE 1, TAPE 2/DAT: 84 dB
ADAPTOR: 84 dB
S/N at 50 mW power (4Ω)
PHONO MM: 75 dB
MC: 67 dB
TUNER, CD, AUX, TAPE 1, TAPE 2/DAT: 78 dB
ADAPTOR: 78 dB
Frequency response
PHONO MM: RIAA standard curve ±0.8 dB (30 Hz~15 kHz)
TUNER, CD, AUX, TAPE 1, TAPE 2/DAT:
3 Hz~100 kHz (+0, −3 dB)
+0 dB, −0.2 dB (20 Hz~20 kHz)
ADAPTOR: 3 Hz~100 kHz (+0, −3 dB)
+0 dB, −0.2 dB (20 Hz~20 kHz)
POWER AMP. DIRECT: 3 Hz~120 kHz (+0, −3 dB)
+0 dB, −0.2 dB (20 Hz~20 kHz)

Technics

Tone contrls	
BASS:	50 Hz, +10~−10 dB
TREBLE:	20 kHz, +10~−10 dB
Muting:	−20 dB
Subsonic filter:	20 Hz, −12 dB/oct
Loudness control (volume at −30 dB):	50 Hz, +9 dB
Output voltage	
TAPE 1, TAPE 2/DAT REC OUT:	150 mV
Channel balance, (AUX 250 Hz~6.3 kHz):	±1 dB
Channel separation (AUX 1 kHz):	50 dB

■ GENERAL

Power consumption:	440 W
Power supply:	AC 50 Hz/60 Hz, 230/240 V
Dimensions (W×H×D):	430×158×429 mm
Weight:	16.5 kg

Notes:

1. Specifications are subject to change without notice.
2. Weight and dimensions are approximate.
3. Total harmonic distortion is measured by the digital spectrum analyzer.

■ CONTENTS

	Page
BEFORE PEPAIR AND ADJUSTMENT	2
PROTECTION CIRCUITRY	2
LOCATION OF CONTROLS	3
ACCESSORY	4
CONNECTIONS	4~6
DISASSEMBLY INSTRUCTIONS	7~10
MEASUREMENTS AND ADJUSTMENTS	11, 12
BLOCK DIAGRAM	12
SCHEMATIC DIAGRAM	13~17
PRINTED CIRCUIT BOARDS	18~21
WIRING CONNECTION DIAGRAM	22
REPLACEMENT PARTS LIST	23~26, 29
CABINET PARTS LOCATION	27, 28
PACKAGING	30

■ BEFORE REPAIR AND ADJUSTMENT

(1) Turn off the power supply. Using a 10Ω, 10 W resistor, shortcircuit both ends of power supply capacitors (C601, C602) in order to discharge the voltage.

(2) Before turning on the power switch of the unit.

A. Connect the voltage controller to the primary side.

B. Connect the AC ampere meter to the primary side or connect the DC voltage meter to the "±B" circuit of the secondary side.

C. Turn the VR of ICQ (VR451, VR452, VR501 and VR502) to minimum (counterclockwise).

D. After setting the output to zero of the voltage controller, turn on the power switch of the unit.
And increase the output of voltage controller gradually.
Then, check carefully whether the current value of primary side become more than following value or whether the DC voltage of secondary side is increasing slowly.

E. If the value of current is increasing unusually or the DC voltage is not increasing, lower the output level of voltage controller immediately.

●The current value of the primary side at no signal. (Confirm the power supply voltage of each area and provided voltage of the unit.)

Power supply voltage		**AC 230 V**	**AC 240 V**
Consumed current	50 Hz	150~450 mA	140~430 mA
	60 Hz		

■ PROTECTION CIRCUITRY

The protection circuitry of the amplifier may have operated if either of the following conditions is noticed:

●No sound is heard when the power is turned on.

●Sound stops during a performance.

The function of this circuitry is to prevent circuitry damage if, for example, the positive and negative speaker connection wires are "shorted", or if speaker systems with an impedance less than the indicated rated impedance of the amplifier are used.

If this occurs, follow the procedure outlined below:

1. Turn off the power.
2. Determine the cause of the problem and correct it.
3. Turn on the power once again.

Note:

When the protection circuitry functions, the unit will not operate unless the power is first turned off and then on again.

■ LOCATION OF CONTROLS

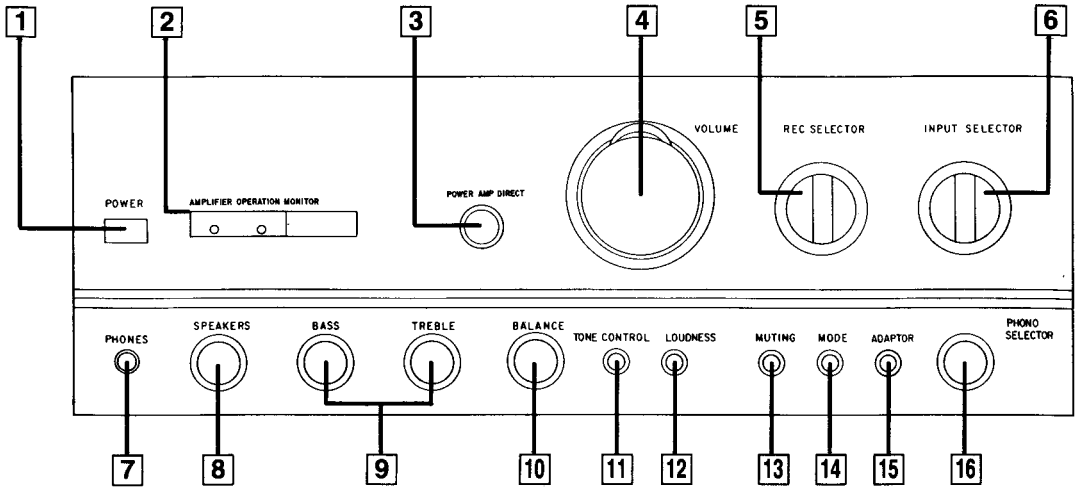

1 Power switch (POWER)

2 Operation indicators (AMPLIFIER OPERATION MONITOR)

These indicators illuminate to indicate the operating condition of this unit.

VOLTAGE CONTROL:

When the power is switched ON, this indicator illuminates when the unit is in the operating condition.

CURRENT DRIVE:

When the power is switched ON, this indicator illuminates after about 4 seconds when the unit is in the operating condition.

If an abnormal condition in the circuitry is detected, such as DC voltage appearing in the output, or a short-circuit of the positive (+) and negative (−) wires from the speaker terminals, the protection circuit functions and this indicator will not illuminate.

3 Power amplifier direct switch (POWER AMP DIRECT)

This switch is used to listen to the sound from a component connected to the "POWER AMP DIRECT" terminals.

When this switch is pressed inward to the "ON" position, a superior level of tone quality can be obtained, because the signals from the component connected to the "POWER AMP DIRECT" terminals are sent directly to the volume control and power amplifier section of this unit. The tone control circuit, balance control, loudness switch, muting switch and mode selector are bypassed.

4 Volume control/indicator (VOLUME)

There are two types of volume scale indications: one for when or the power amplifier direct switch is OFF, and one for when it is ON (Indicator will illuminate.).

5 Recording selector (REC SELECTOR)

This selector is used to select the sound source to be recorded by the connected tape deck 1 and/or tape deck 2 (or DAT).

6 Input selector (INPUT SELECTOR)

This selector is used to select the sound source to be heard, such as a disc, radio broadcast, etc.

7 Headphones jack (PHONES)

8 Speaker selector (SPEAKERS)

This selector is used to select the speakers to be used.

9 Tone controls (BASS/TREBLE)

The bass control is used to adjust the low-frequency sound range, and the treble control is used to adjust the high-frequency sound range.

10 Balance control (BALANCE)

This control is used to adjust the left/right volume balance.

11 Tone control switch (TONE CONTROL)

This switch is used to set the tone control circuit (bass, treble) to ON or DEFEAT.

12 Loudness switch (LOUDNESS)

This switch is used when listening to music at a low volume level. Auditory perception of sound in the low frequency range falls off at low volume, but when the switch is set to the "ON" position, this deficiency is compensated for, so that the full impact of the musical performance can be enjoyed.

13 Muting switch (MUTING)

This switch is used to temporarily reduce the volume level (approx. 1/10).

The effect activates when setting this switch to the "ON" position.

14 Mode selector (MODE)

This selector is used to select stereo or monaural operation.

15 Adaptor switch (ADAPTOR)

This switch is used when enjoying music by changing the sound quality with the graphic equalizer, etc.

16 Phono cartridge selector (PHONO SELECTOR)

This selector should be set to the position which corresponds to the type of cartridge used on the turntable.

The "SUBSONIC" position is used to eliminate ultra-low-frequency noise such as motor "rumble" and unusual vibration of the woofer cone caused by a warped disc, etc.

■ ACCESSORY

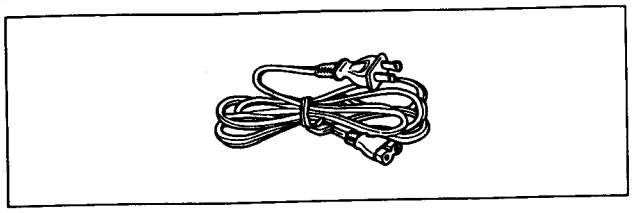

- AC power supply cords 1
  <RJA0019-1K> For (EG) area.
  <SJA193> For (EB) area.
  <SJA173> For (GN) area.

■ CONNECTIONS

To connect to each terminals

Make connections to each component in the system by using stereo connection cables (not included).

Stereo connection cable White (L) / Red (R)

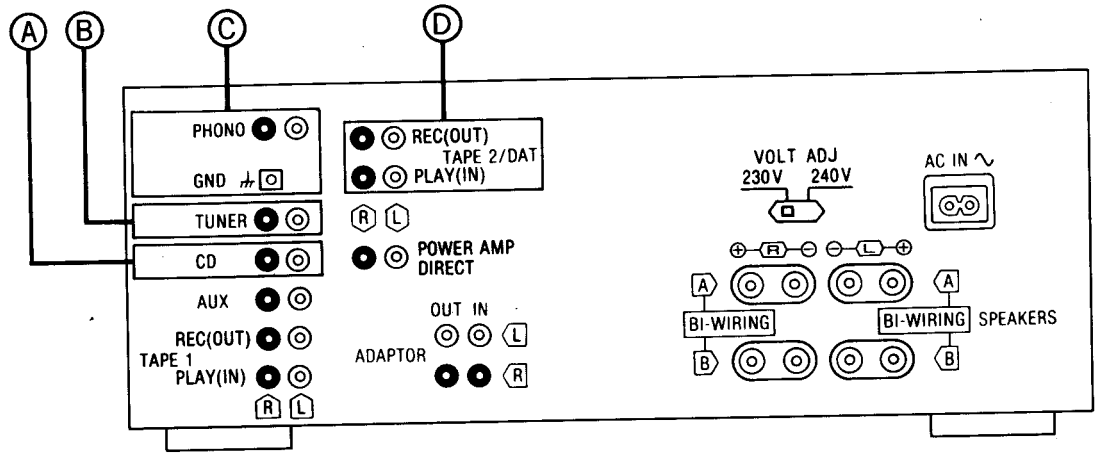

- **Phono input capacitance is about 220 pF.**

Ⓐ "CD" terminals

Connect to a compact disc player.

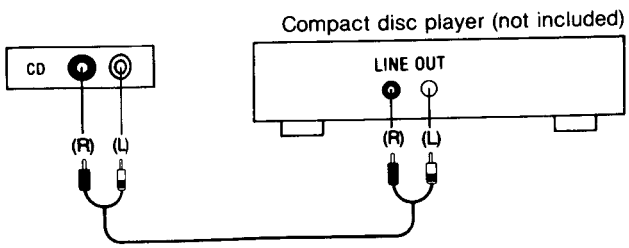

Ⓑ "TUNER" terminals

Connect to a tuner.

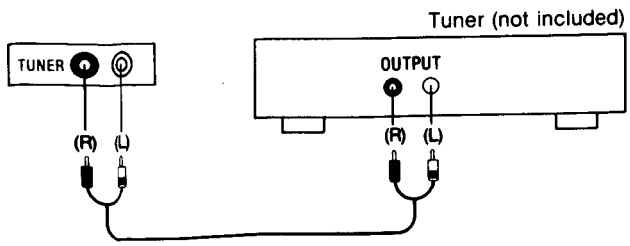

Ⓒ "PHONO" terminals

Connect to a turntable.

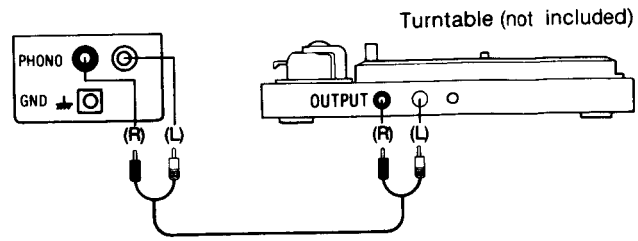

■ "GND" terminal

This terminal is for use with a turntable which has a ground wire.

Ⓓ "TAPE 2/DAT" terminals

Connect to a second tape deck or a digital audio tape deck (DAT).

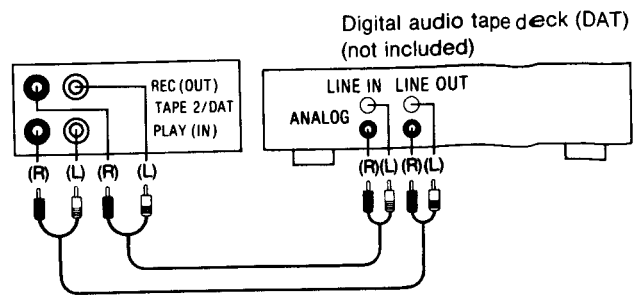

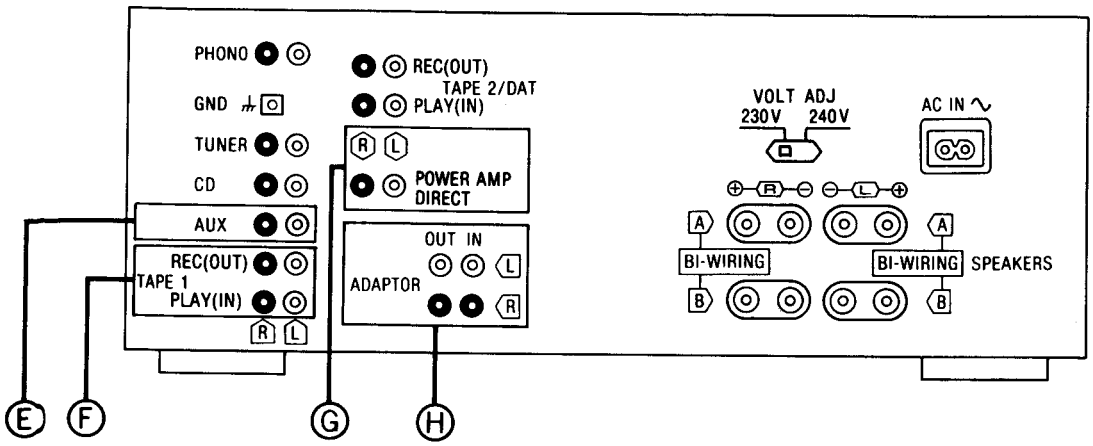

Ⓔ "AUX" terminals

Connect to a component such as a video disc player (audio only connectable), etc.

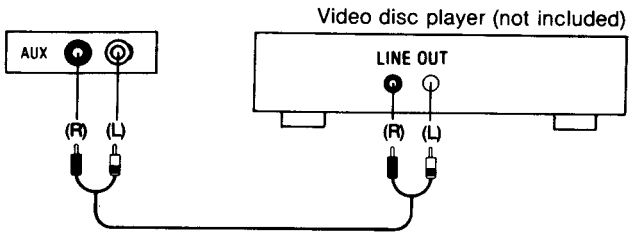

Ⓕ "TAPE 1" terminals

Connect to a first tape deck.

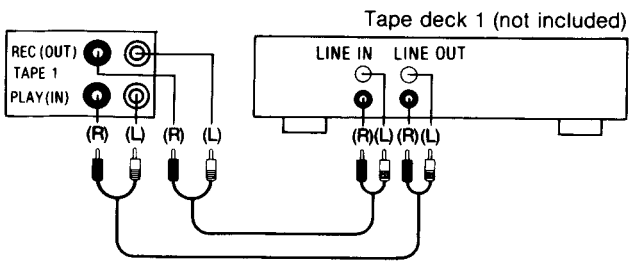

Ⓖ "POWER AMP DIRECT" terminals

Connect to a compact disc player, a digital audio tape deck, or a D/A converter.
A superior level of tone quality can be obtained, because the signals from these terminals are sent directly to the volume control and power amplifier section of this unit.
The sounds from a component connected to these terminals cannot be recorded.

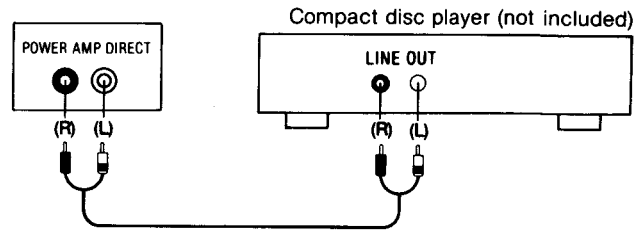

Ⓗ "ADAPTOR" terminals

Connect to a graphic equalizer.

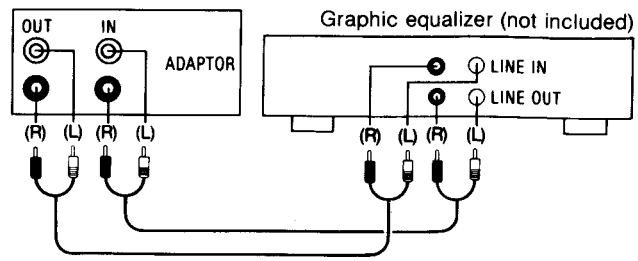

To connect to speakers

One pair of speakers can be connected to the "A" terminals of this unit and one pair to the "B" terminals, or only one pair of bi-wired speakers can be connected to all terminals.

To connect main and/or second speakers

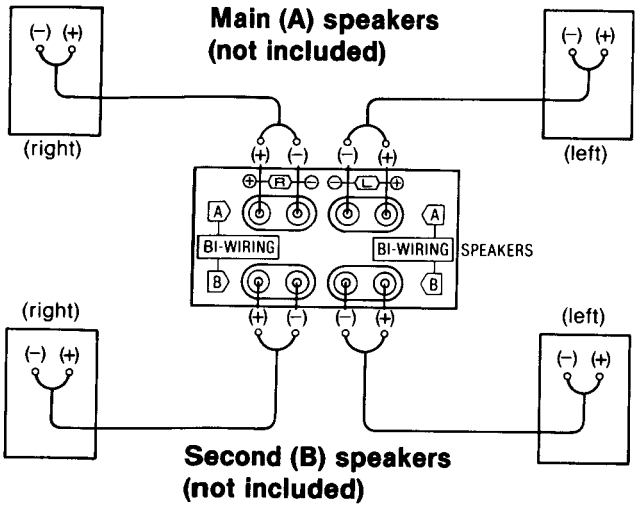

■ Load impedance

- When only the "A" or only the "B" terminals are used: 4 – 16 ohms
- When both the "A" and the "B" terminals are used simultaneously: 8 – 16 ohms

To connect bi-wired speakers

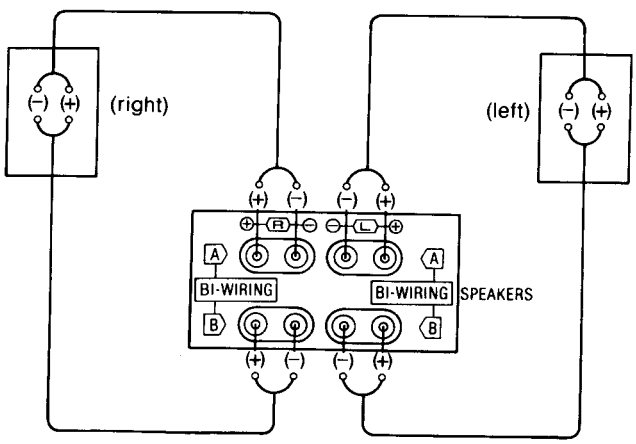

Note: Connect only bi-wired speakers in this way.

■ Load impedance

When bi-wired speakers are used: 4 – 16 ohms

■ Bi-wiring

The treble range and the bass range of the speakers are connected to the speaker terminals of the amplifier by using two speaker connection cords separately for each.
As a result of making connections in this way, sound can be reproduced with much greater nuance and detail, with the feelings of air oscillation and deepness of sound provided by an input source that suppresses reciprocal band-range interference.
(Refer to the operating instructions of the speakers.)

To connect cords to terminals

① Strip off the outer covering, and twist the center conductor.

② Turn completely to the left.

③ Insert the wire and turn completely to the right. Pull the cord to assure a proper connection.

Note: Be sure to only connect positive (+) cords to positive (+) terminals, and negative (–) cords to negative (–) terminals.

Note:
To prevent damage to circuitry, never short-circuit the plus (+) and minus (–) speaker wires.

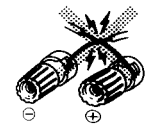

To set the power voltage

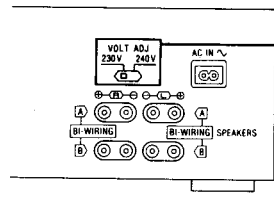

Set the voltage selector to the voltage setting for the area in which the unit will be used.
[Use a minus (–) screwdriver]

Note:
Note that this unit will be seriously damaged if this setting is not made correctly.

To connect the AC power supply cord (included)

Connect the AC power supply cord (included) after all other cables and cords are connected.

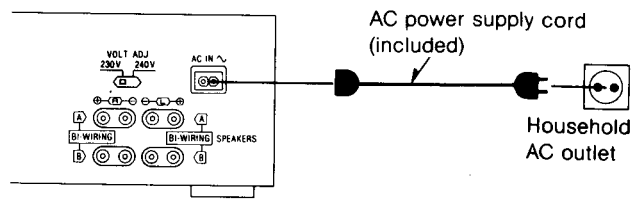

Note:
The configuration of the AC power supply cord differs according to area.

For United Kingdom

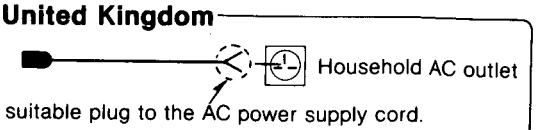

■ DISASSEMBLY INSTRUCTIONS

"ATTENTION SERVICER"
Some chassis components may have sharp edges. Be careful when disassembling and servicing.

Ref. No. 1	Removal of the Cabinet

Procedure 1

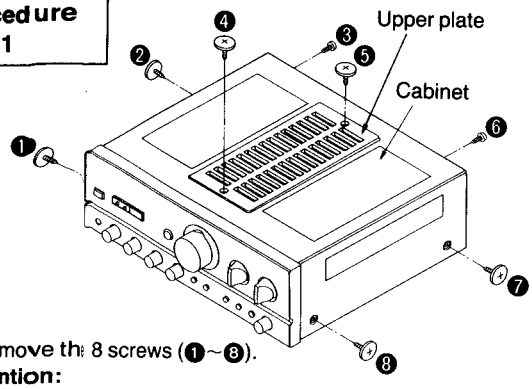

- Remove the 8 screws (❶~❽).

Attention:
When removing the cabinet from the unit, please don't forget to remove the 2 screws (❹, ❺) of the upper plate.
Unless you remove the 2 screws (❹, ❺), it may change shape of the cabinet.

Ref. No. 2	Removal of the Upper Plate

Procedure 1→2

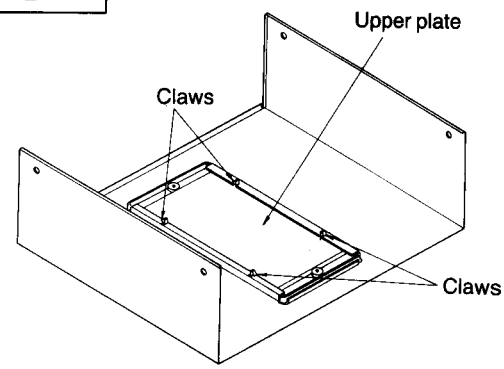

- Release the 4 claws.

Ref. No. 3	Removal of the Center Angle

Procedure 1→3

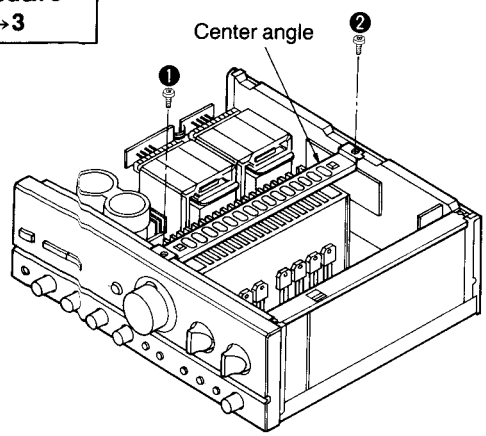

- Remove the 2 screws (❶, ❷).

Ref. No. 4	Removal of the Side Angle

Procedure 1→4

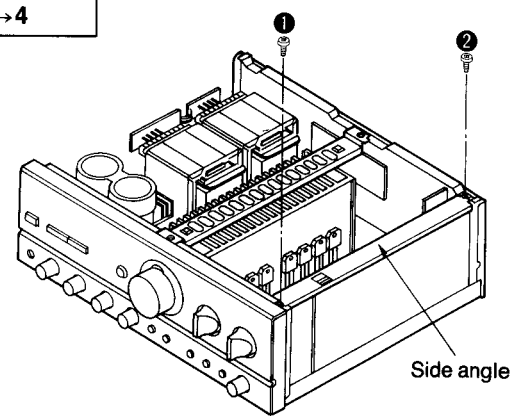

- Remove the 2 screws (❶, ❷).

Ref. No. 5	Removal of the Capacitor Block P.C.B.

Procedure 1→5

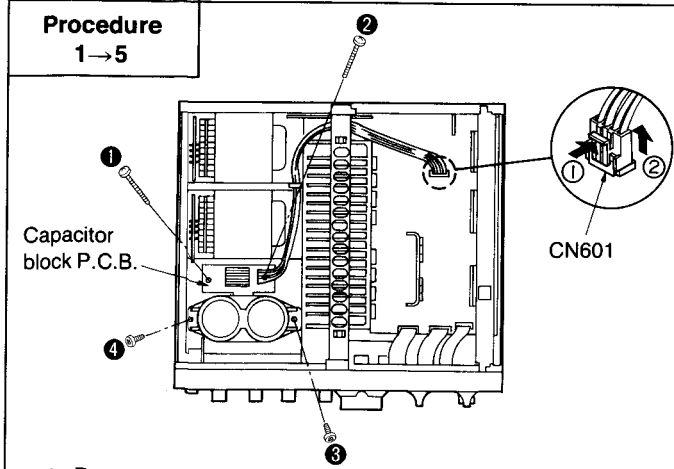

1. Remove the 1 connector (CN601).
2. Remove the 4 screws (❶~❹).

Ref. No. 6	Removal of the Power Transformer (1), (2)

Procedure 1→6

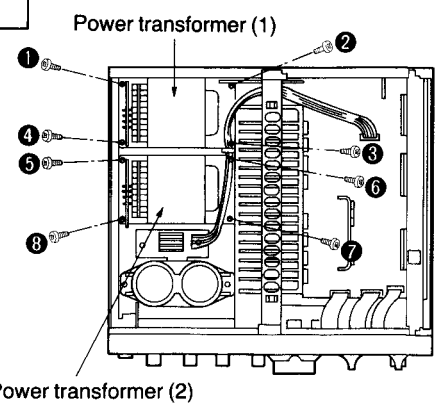

- Remove the 8 screws (❶~❽).

Ref. No. 7	Removal of the Front Panel Ass'y
Procedure 1→3→4→7	

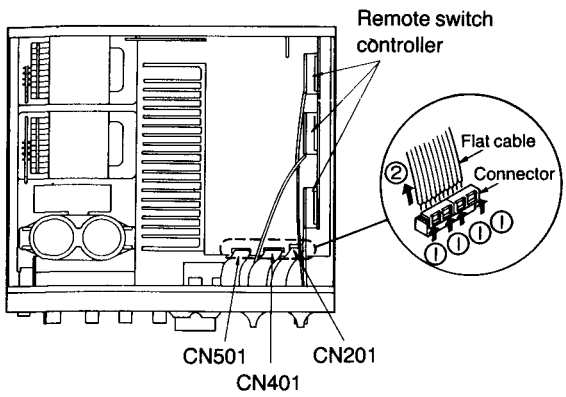

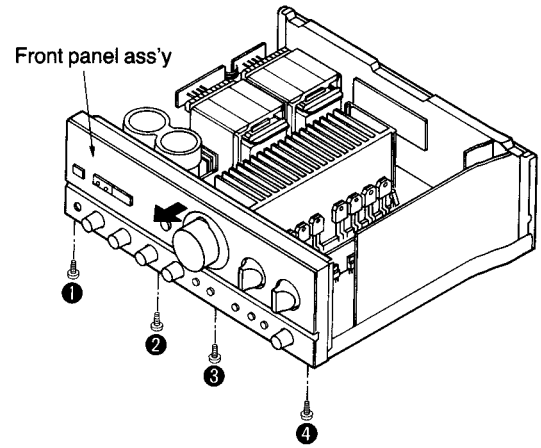

1. Remove the remote switch controller.
2. Remove the 3 flat cables (CN201, CN401, CN501).
3. Remove the 4 screws (❶~❹).
4. Remove the front panel ass'y in the direction of arrow.

■ Removal of the remote switch controller

•Remove the 4 claws.

S101 (PHONO)

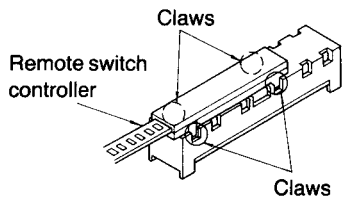

S102, S103 (REC, INPUT)

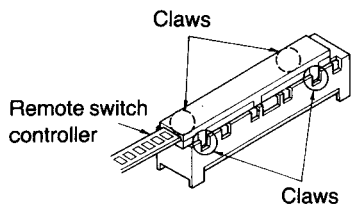

■ Replacing of the remote switch controller

1. Turn the selector knobs to the arrows.
2. Put the switch slider of switch to end and put in the remote switch controller.

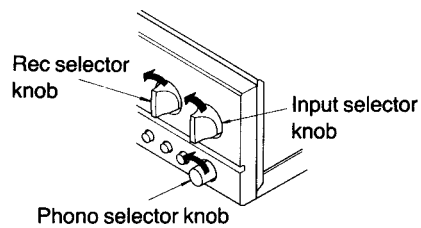

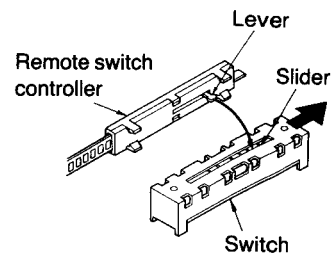

Ref. No. 8	Removal of the Power Switch/ Headphones Jack P.C.B.
Procedure 1→3→4→ 7→8	

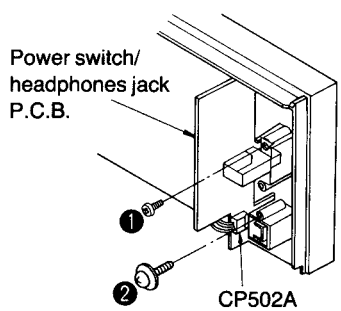

1. Remove the 1 connector (CP502A).
2. Remove the 2 screws (❶, ❷).

Ref. No. 9	Removal of the Volume P.C.B.
Procedure 1→3→4→ 7→9	

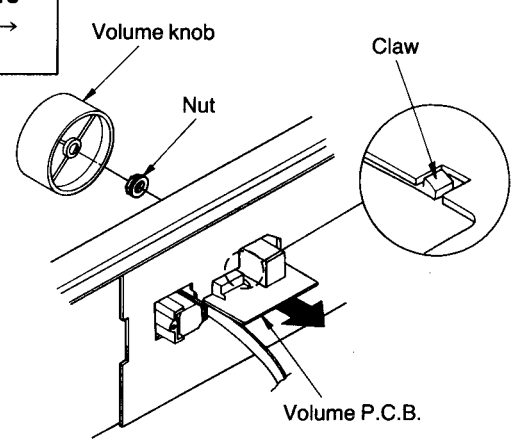

1. Pull out the volume knob.
2. Remove the nut.
3. Release the 1 claw.

Ref. No. 10 — Removal of the Remote Switch Controller

Procedure 1→3→4→7→10

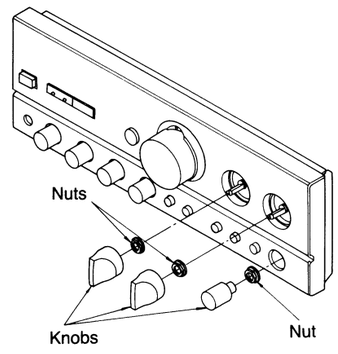

1. Pull out the 3 knobs.
2. Remove the 3 nuts.

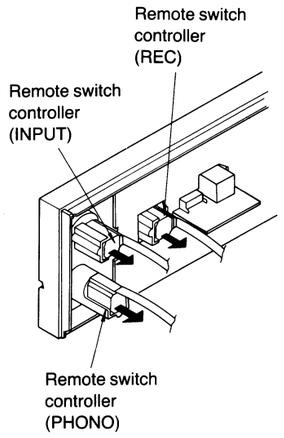

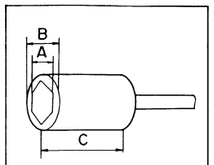

A: 11 mm
B: 16 mm
C: longer than 22 mm

●Use a wrench of the dimensions shown in the illustration above to remove nuts.

3. Remove the remote switch controller in the direction of arrow.

Ref. No. 11 — Removal of the Operation P.C.B.

Procedure 1→3→4→7→8→9→11

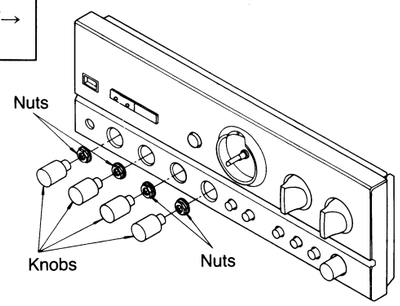

1. Pull out the 4 knobs.
2. Remove the 4 nuts.

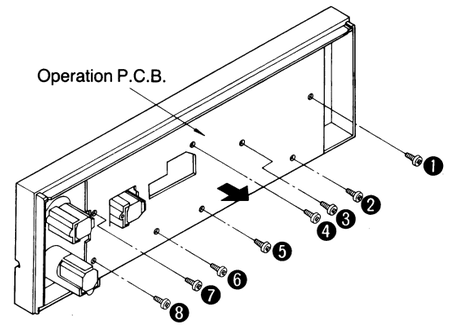

3. Remove the 8 screws (❶~❽).
4. Remove the operation P.C.B. in the direction of arrow.

Ref. No. 12 — Removal of the AC INLET/VOLT ADJ. P.C.B.

Procedure 1→3→12

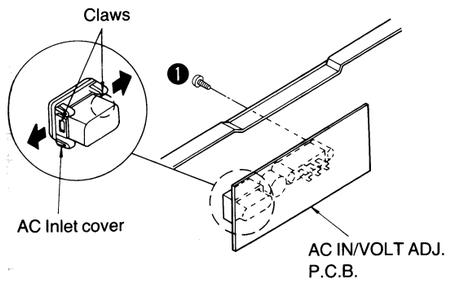

1. Remove the 1 screw (❶).
2. Release the 2 claws of AC inlet cover.

Ref. No. 13 — Removal of the Rear Panel

Procedure 1→3→4→13

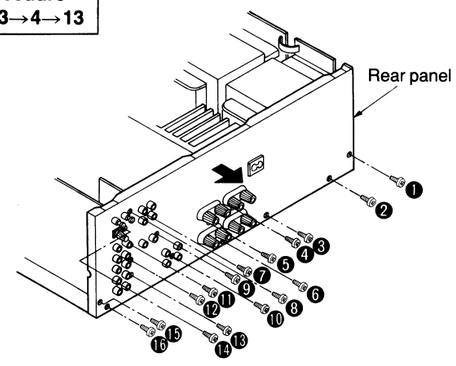

1. Remove the 16 screws (❶~⓰).
2. Remove the rear panel in the direction of arrow.

Ref. No. 14 — Removal of the Input Select P.C.B.

Procedure 1→3→4→13→14

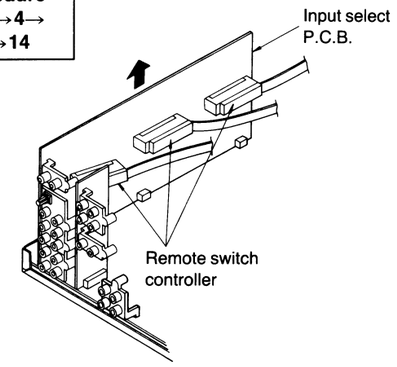

1. Remove the remote switch controller.
2. Remove the input select P.C.B. in the direction of arrow.

Ref. No. 15 — Removal of the Tape 2/DAT P.C.B.

Procedure 1→3→4→13→15

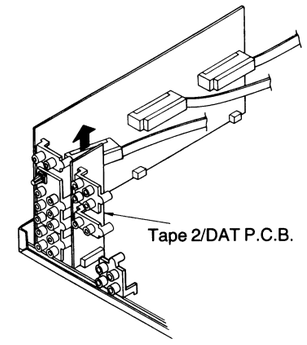

●Remove the tape 2/DAT P.C.B. in the direction of arrow.

Ref. No. 16 — Removal of the Main P.C.B.

Procedure 1→3→4→13→14→15→16

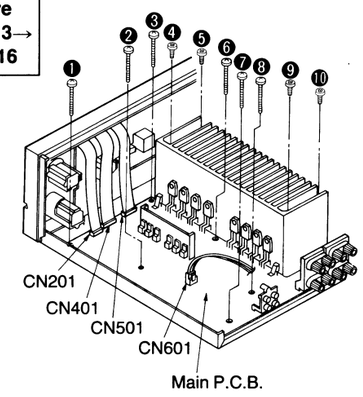

1. Remove the 3-flat cables (CN201, CN401, CN501).
2. Remove the 1 connector (CN601).
3. Remove the 10 screws (❶~⓾).

Ref. No. 17 — Removal of the Power Transistor

Procedure 1→17

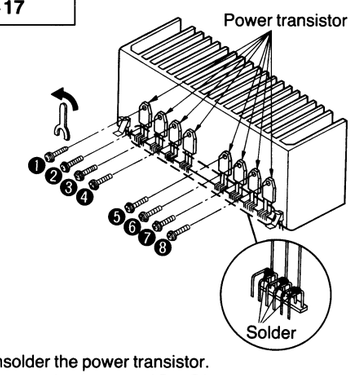

1. Unsolder the power transistor.
2. Remove the 8 screws (❶~❽).

●When mounting the power transistor, apply silicon thermal compound (RFKX0002) to the rear of the power transistor.

Ref. No. 18 — Check of the Main P.C.B.

Procedure 1→18

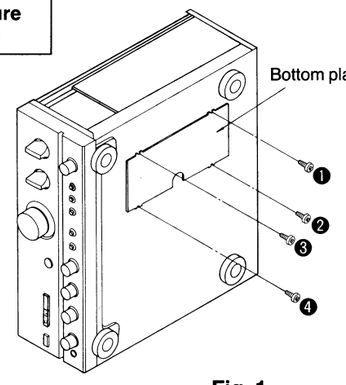

Fig. 1

1. Remove the 4 screws (❶~❹).

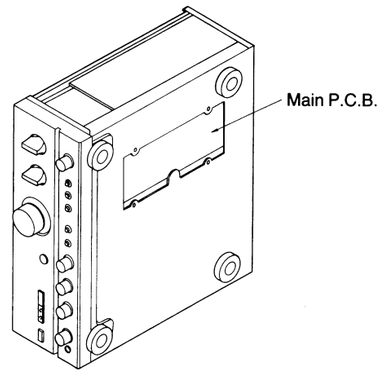

Fig. 2

2. When checking the soldered surface of the digital P.C.B. and replacing the parts, do as shown in the Fig. 2.

Removal of the Input Select P.C.B.

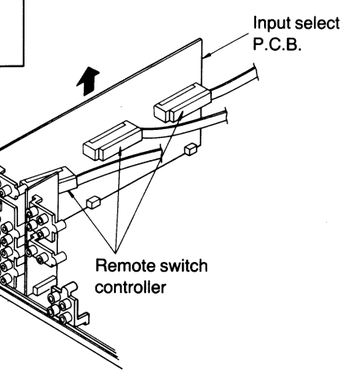

…he remote switch controller.
…he input select P.C.B. in the direction of arrow.

Ref. No. 15 — Removal of the Tape 2/DAT P.C.B.

Procedure
1→3→4→13→15

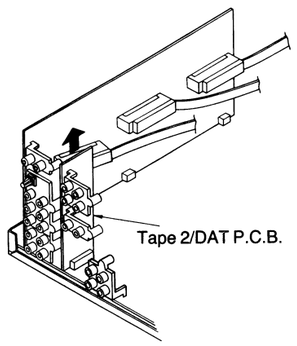

●Remove the tape 2/DAT P.C.B. in the direction of arrow.

Removal of the Main P.C.B.

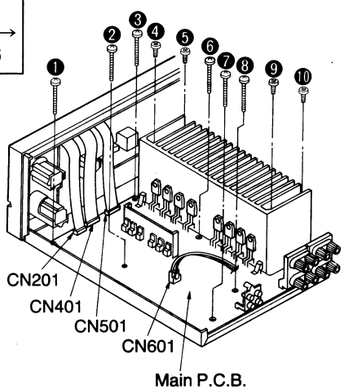

…he 3-flat cables (CN201, CN401, CN501).
…he 1 connector (CN601).
…he 10 screws (❶~⑩).

Ref. No. 17 — Removal of the Power Transistor

Procedure
1→17

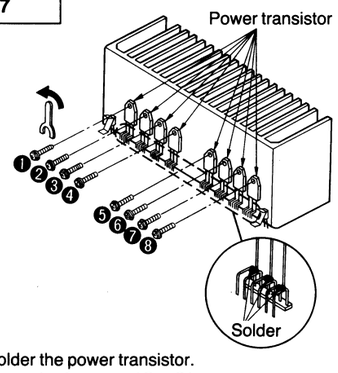

1. Unsolder the power transistor.
2. Remove the 8 screws (❶~❽).

●When mounting the power transistor, apply silicon thermal compound (RFKX0002) to the rear of the power transistor.

Check of the Main P.C.B.

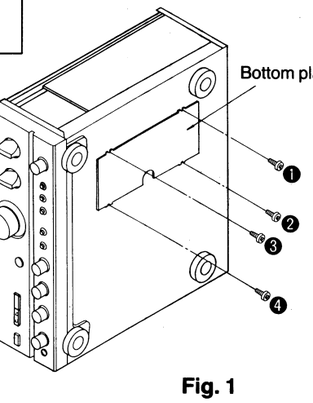

Fig. 1

…he 4 screws (❶~❹).

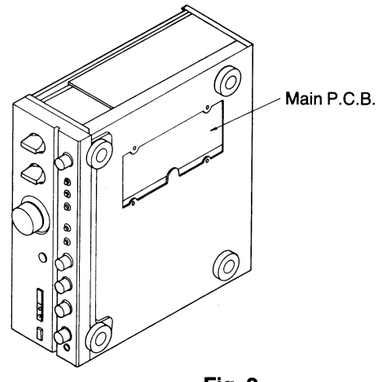

Fig. 2

2. When checking the soldered surface of the digital P.C.B. and replacing the parts, do as shown in the Fig. 2.

●Replacement of the Foot

1. Remove the 4 heat melted posts on the chassis with a pair of nippers or similar tool.
2. To replace the foot (RKA0009-1) on the chassis, melt the 4 posts with a soldering iron.

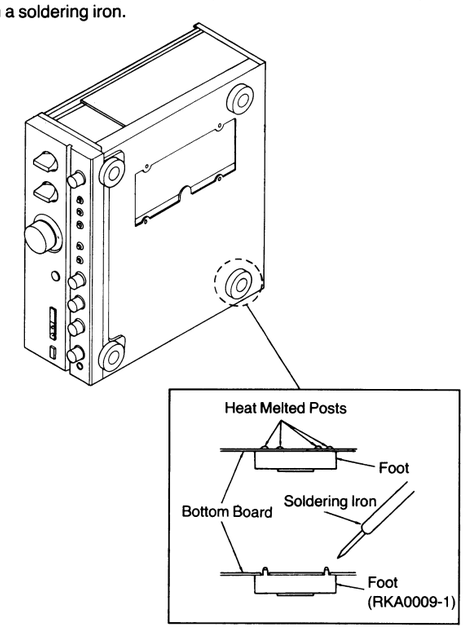

■ MEASUREMENTS AND ADJUSTMENTS

●ADJUSTMENT

Control positions and equipment used.

●Volume knob . . . . . ∞ (Minimum)
●Speaker selector . . . . . off

●AC and DC electronic voltmeter (EV

(1) VOLTAGE CONTROL (V) AMP. IDLING (ICQ) ADJUSTMENT

1. Test equipment connection is shown in figure. (Connect the DC EVM on both channels.)
2. Completely turn the (V) amp. adjusting volumes **(VR451, VR452)** counter-clockwise.
3. Turn ON the set when it is cold, and about 8 sec. later, adjust **VR451** and **VR452** so that the voltage is **60 mV**.

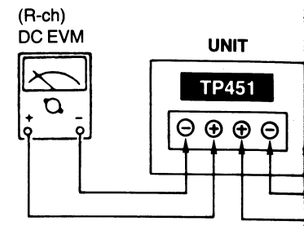

(2) CURRENT DRIVE (C) AMP. IDLING (ICQ) ADJUSTMENT

1. Test equipment connection is shown in figure. (Connect the DC EVM on both channels.)
2. Completely turn the (C) amp. adjusting volumes **(VR501, VR502)** counter-clockwise.
3. Turn ON the set when it is cold, and the "VOLTAGE CONTROL (V) AMP. IDLING (ICQ) ADJUSTMENT" later, adjust **VR501** and **VR502** so that the voltage is **2 mV**.

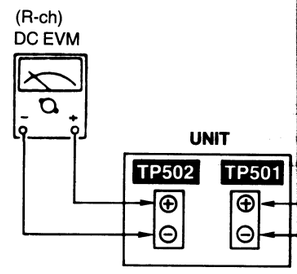

●ADJUSTMENT POINTS

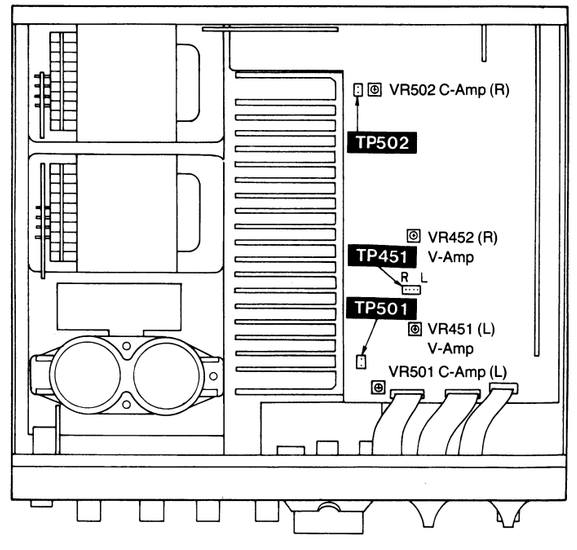

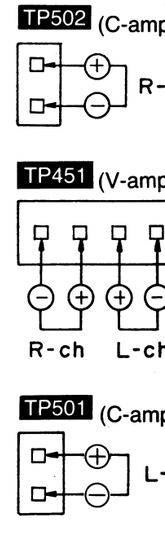

ssis with a pair of nippers

ssis, melt the 4 posts

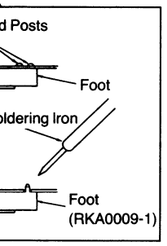

■ MEASUREMENTS AND ADJUSTMENTS

●ADJUSTMENT

Control positions and equipment used.

- ●Volume knob . . . . . ∞ (Minimum)
- ●Speaker selector . . . . . off
- ●AC and DC electronic voltmeter (EVM)

(1) VOLTAGE CONTROL (V) AMP. IDLING (ICQ) ADJUSTMENT

1. Test equipment connection is shown in figure. (Connect the DC EVM on both channels.)
2. Completely turn the (V) amp. adjusting volumes **(VR451, VR452)** counter-clockwise.
3. Turn ON the set when it is cold, and about 8 sec. later, adjust **VR451** and **VR452** so that the voltage is **60 mV**.

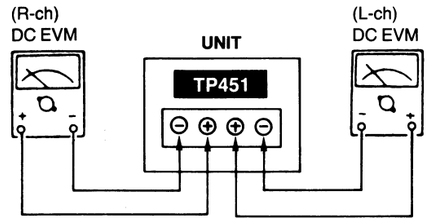

(2) CURRENT DRIVE (C) AMP. IDLING (ICQ) ADJUSTMENT

1. Test equipment connection is shown in figure. (Connect the DC EVM on both channels.)
2. Completely turn the (C) amp. adjusting volumes **(VR501, VR502)** counter-clockwise.
3. Turn ON the set when it is cold, and the "VOLTAGE CONTROL (V) AMP. IDLING (ICQ) ADJUSTMENT" later, adjust **VR501** and **VR502** so that the voltage is **2 mV**.

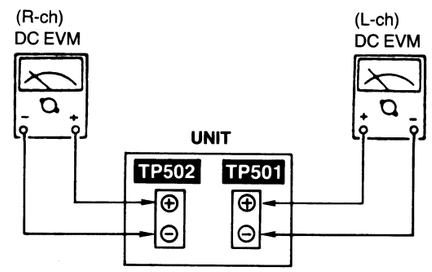

●ADJUSTMENT POINTS

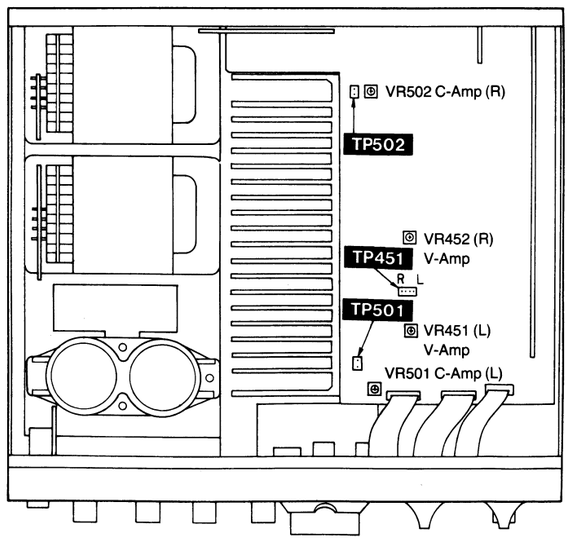

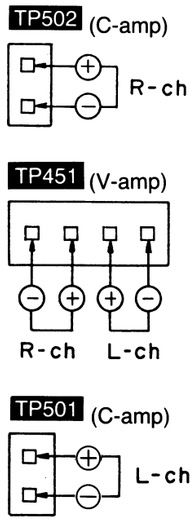

■ BLOCK DIAGRAM

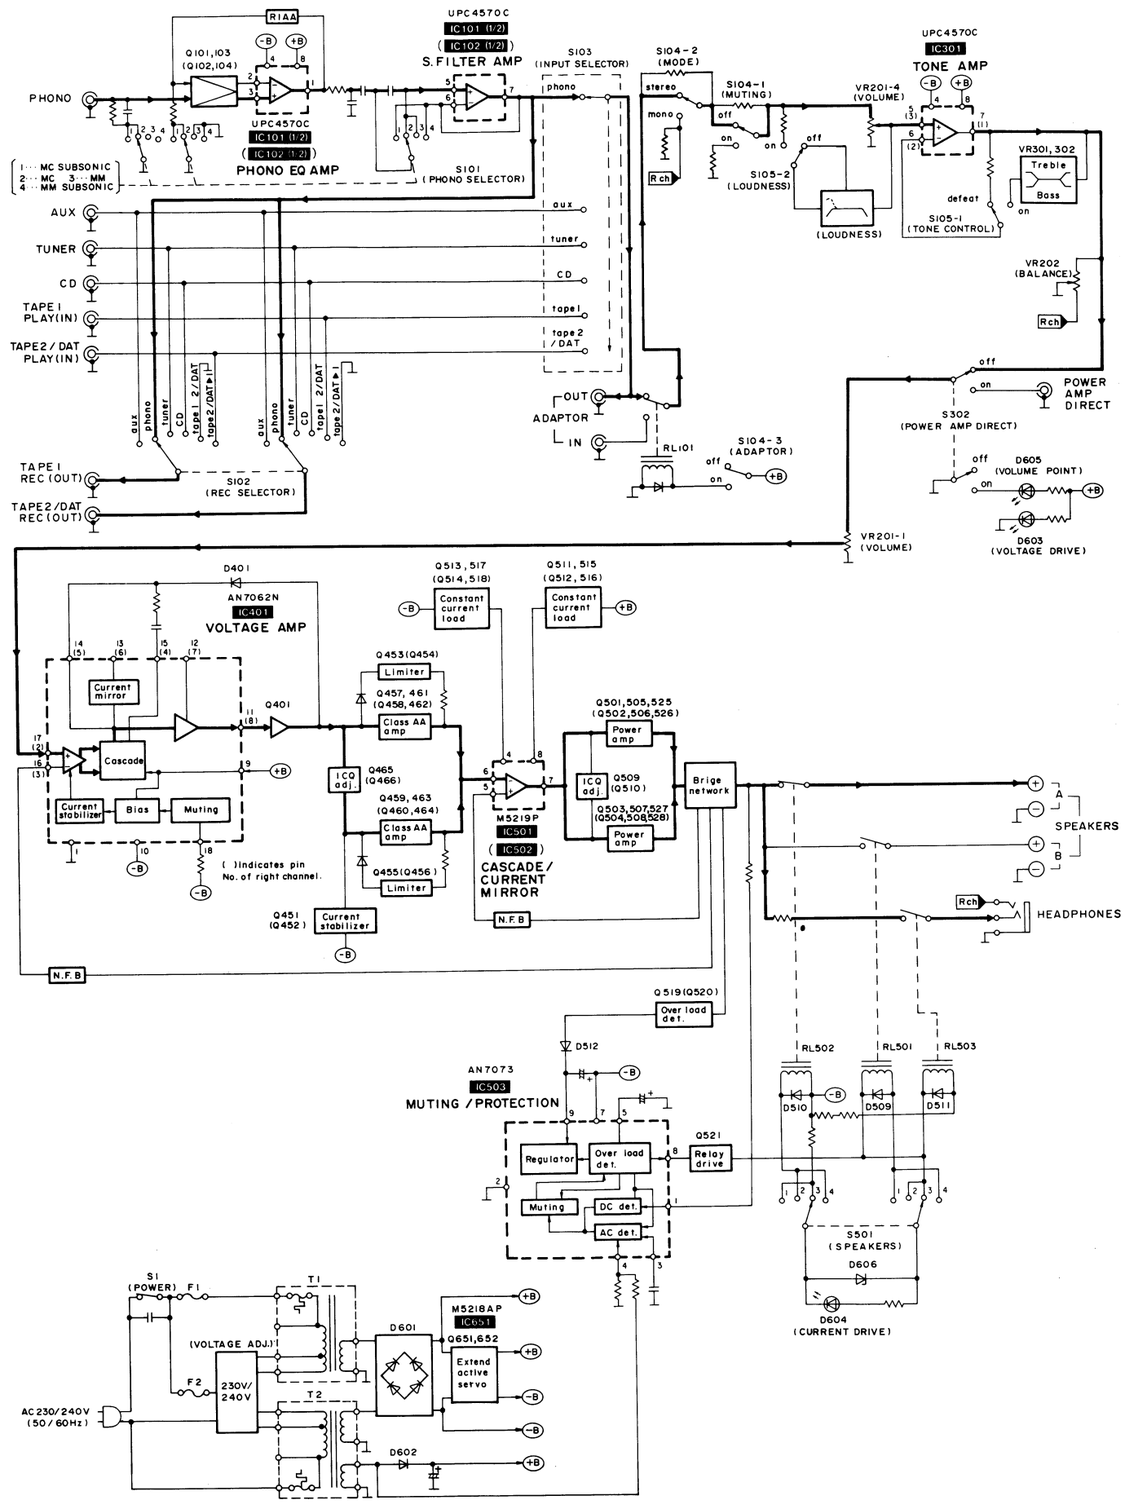

SU-VX920 SU-VX920

■ SCHEMATIC DIAGRAM (Parts list on pages 23~26.)

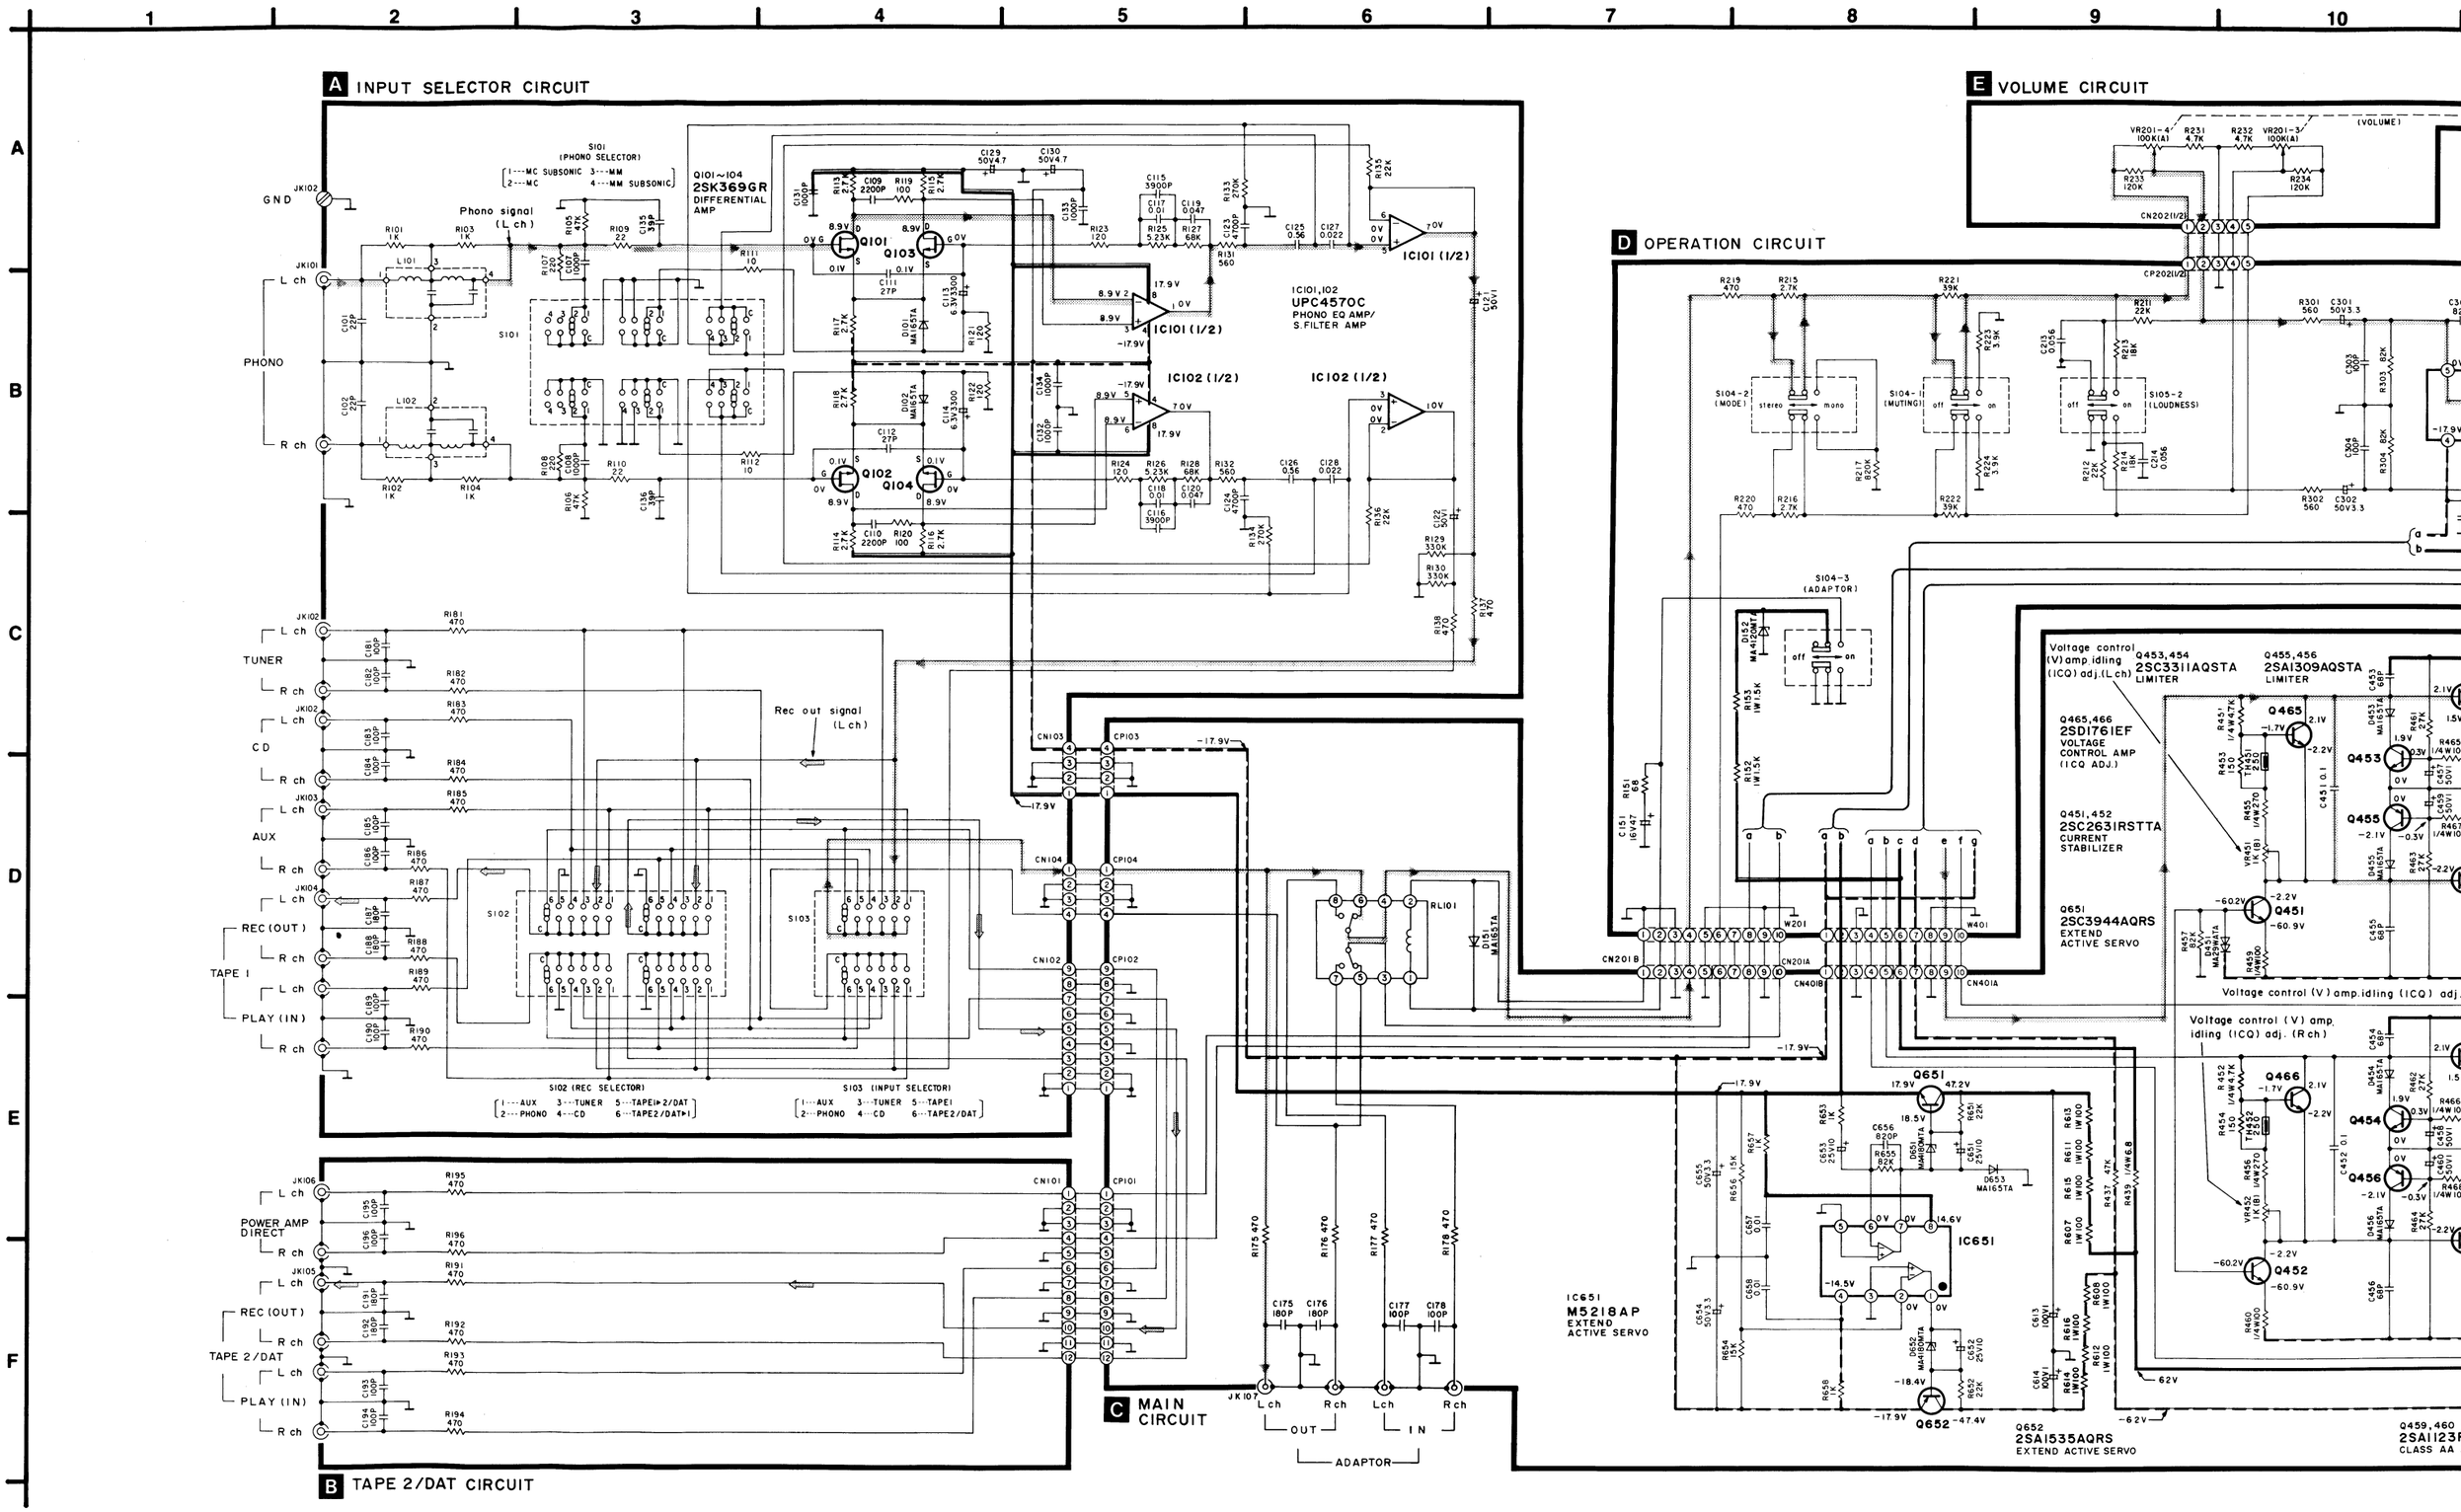

7 8 9 10 11 12 13 14 15 16 17

E VOLUME CIRCUIT

D OPERATION CIRCUIT

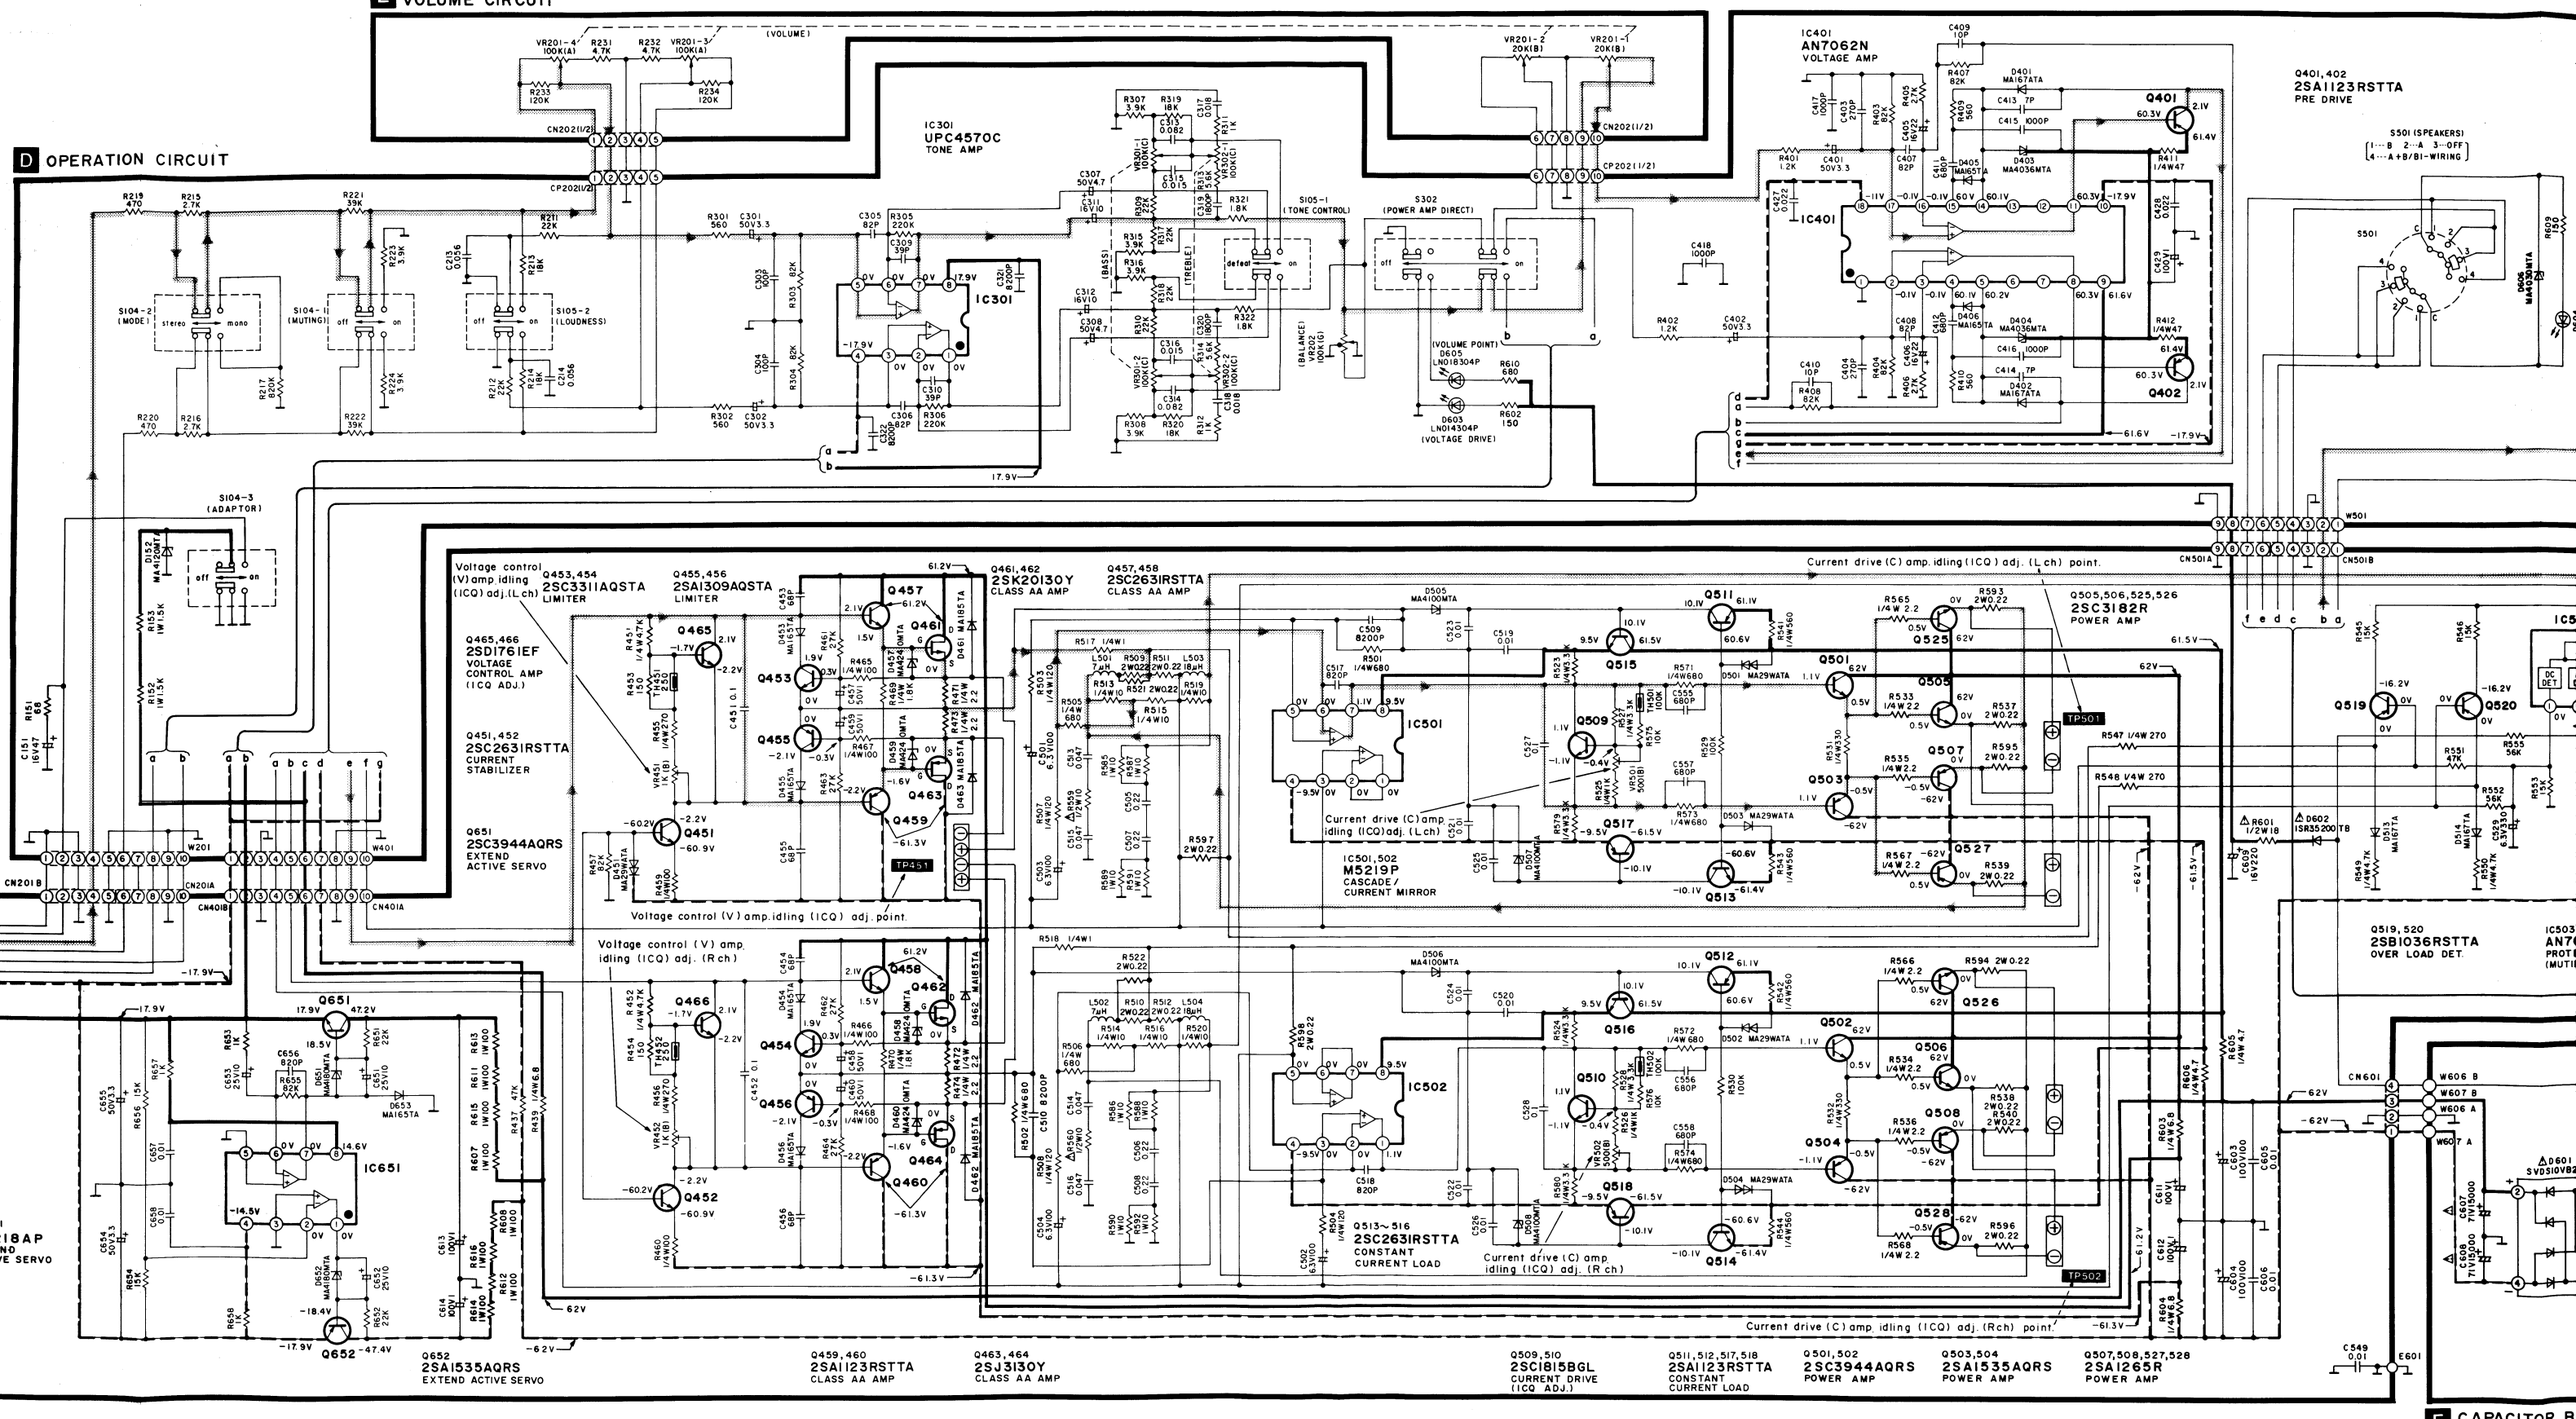

12 13 14 15 16 17 18 19 20 21 22

IC401 AN7062N VOLTAGE AMP

Q401, 402 2SA1123RSTTA PRE DRIVE

S501 (SPEAKERS) 1···B 2···A 3···OFF 4···A+B/B1-WIRING

Current drive (C) amp. idling (ICQ) adj. (L ch) point.

Q505,506,525,526 2SC3182R POWER AMP

IC503

Current drive (C) amp. idling (ICQ) adj. (R ch) point.

IC501 M5219P CASCADE/ CURRENT MIRROR

Current drive (C) amp. idling (ICQ) adj. (L ch)

IC502

Q513~516 2SC2631RSTTA CONSTANT CURRENT LOAD

Q519,520 2SB1036RSTTA OVER LOAD DET.

IC503 AN7073 PROTECTION (MUTING)

Q521 2SA992EFPTA RELAY DRIVE

SPEAKERS

G AC IN/VOLTAGE ADJ. CIRCUIT

F CAPACITOR BLOCK CIRCUIT

H POWER SWITCH/ HEADPHONES JACK CIRCUIT

Q509,510 2SC1815BGL CURRENT DRIVE (ICQ ADJ.)

Q511,512,517,518 2SA1123RSTTA CONSTANT CURRENT LOAD

Q501,502 2SC3944AQRS POWER AMP

Q503,504 2SA1535AQRS POWER AMP

Q507,508,527,528 2SA1265R POWER AMP

(This schematic diagram may be modified at any time with the development of new technology.)

Notes:

- •S1 : Power switch in **"off"** position.
- •S2 : Voltage selector switch in **"240 V"** position. (230 V/240 V)
- •S101 : Phono cartridge selector (PHONO SELECTOR) switch in **"MC"** position.
- •S102 : Recording output selector (REC SELECTOR) switch in **"TAPE2/DAT ▶1"** position.
- •S103 : Input selector (INPUT SELECTOR) switch in **"TAPE2/DAT"** position.
- •S104-1 : Muting (MUTING) switch in **"off"** position.
- •S104-2 : Mode (MODE) switch in **"stereo"** position.
- •S104-3 : Adaptor (ADAPTOR) switch in **"off"** position.
- •S105-1 : Tone control (TONE CONTROL) switch in **"defeat"** position.
- •S105-2 : Loudness (LOUDNESS) switch in **"off"** position.
- •S302 : Power amplifier direct (POWER AMP DIRECT) switch in **"off"** position.
- •S501 : Speaker selector (SPEAKERS) switch in **"off"** position.
- ——— : Positive voltage line.
- – – – – : Negative voltage line.
- : Phono signal line.
- : Recording output signal line.

- •Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high-impedance) with the chassis taken as standard. Therefore, there may exist some error in the voltage values, depending on the internal impedance of the DC circuit tester.
- •Important safety notice:
  Components identified by ⚠ mark have special characteristics important for safety.
  Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used. When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.

- •**Caution!**
  IC and LSI are sensitive to static electricity.
  Secondary trouble can be prevented by taking care during repair.
  Cover the parts boxes made of plastics with aluminum foil.
  Ground the soldering iron.
  Put a conductive mat on the word table.
  Do not touch the legs of IC or LSI with the fingers directly.

•Terminal guide of IC's, transistors and diodes

M5218AP

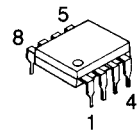

M5219P

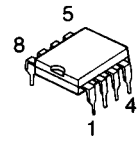

AN7073

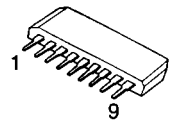

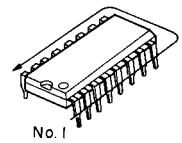

UPC4570C	8 Pin
AN7062N	18 Pin

2SA1265R
2SC3182R

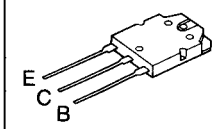



2SA1309AQSTA
2SB1036RSTTA
2SC3311AQSTA

2SK369GR





2SA992EFPTA
2SA1123RSTTA
2SC1815BGL
2SC2631RSTTA

2SA1535AQRS
2SC3944AQRS
2SD1761EF

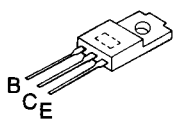

2SK20130Y
2SJ3130Y

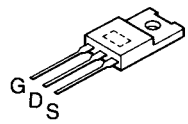

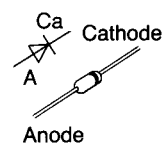

1SR35200TB
MA165TA
MA167TA
MA167ATA
MA185TA
MA29WATA

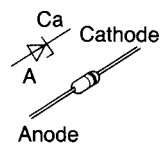

MA4100MTA
MA4120MTA
MA4160MTA
MA4180MTA
MA4240MTA

MA4030MTA
MA4036MTA

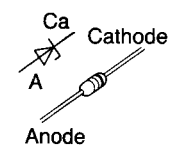

SVDS10VB20F



LN014304P
LN018304P

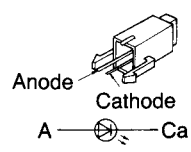

SU-VX920 SU-VX92

■ PRINTED CIRCUIT BOARDS (Parts list on pages 23~26.)

1 2 3 4 5 6 7 8 9 10

A B C D E F

C MAIN P.C.B. (REPI372A-M)

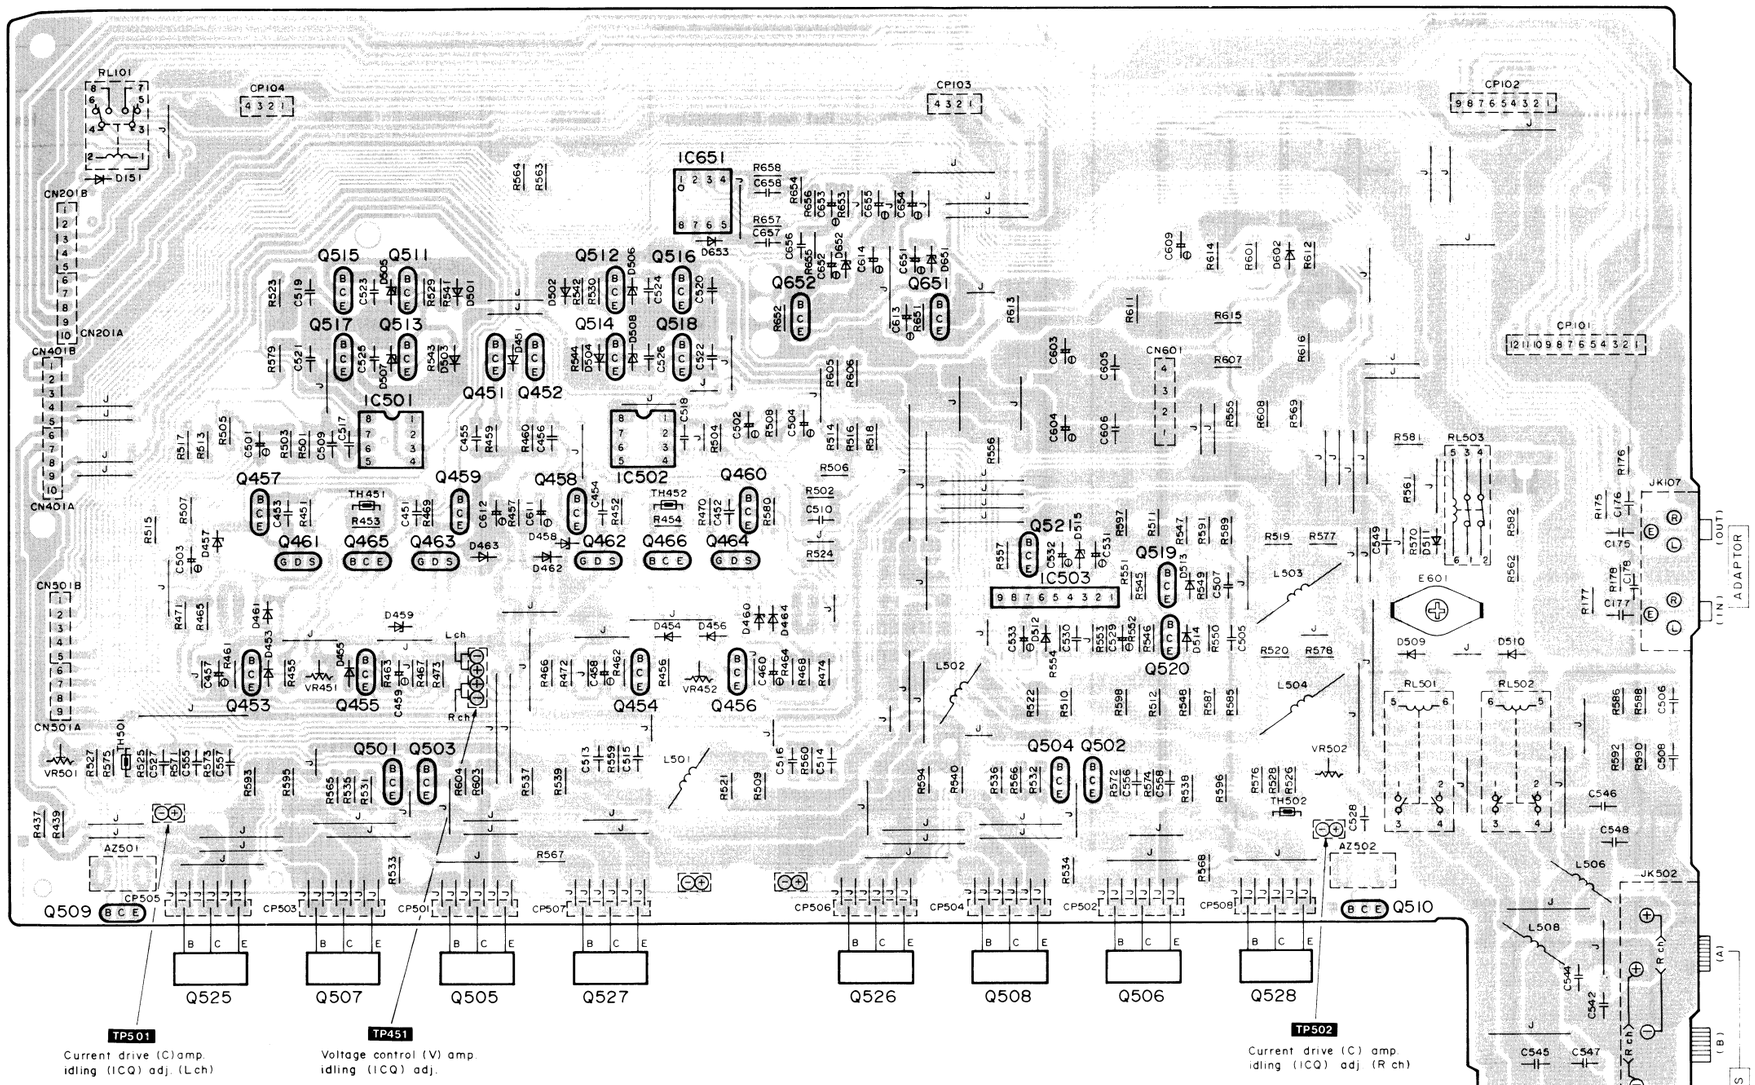

B TAPE 2/DAT P.C.B.

(REPI374A-P···[EB, EG]
REPI374B-P···[GN])

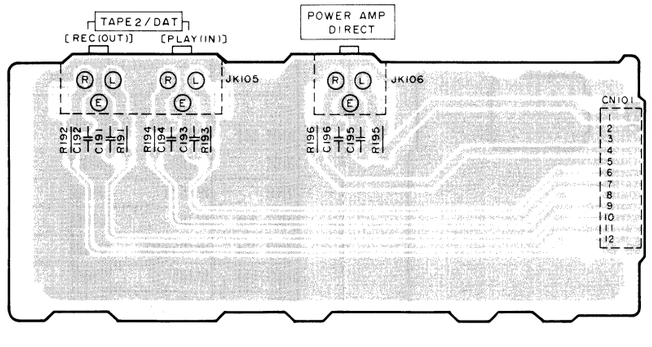

●This circuit board diagram may be modified at any time with the d

D OPERATION P.C.B. (REPI373A-S)

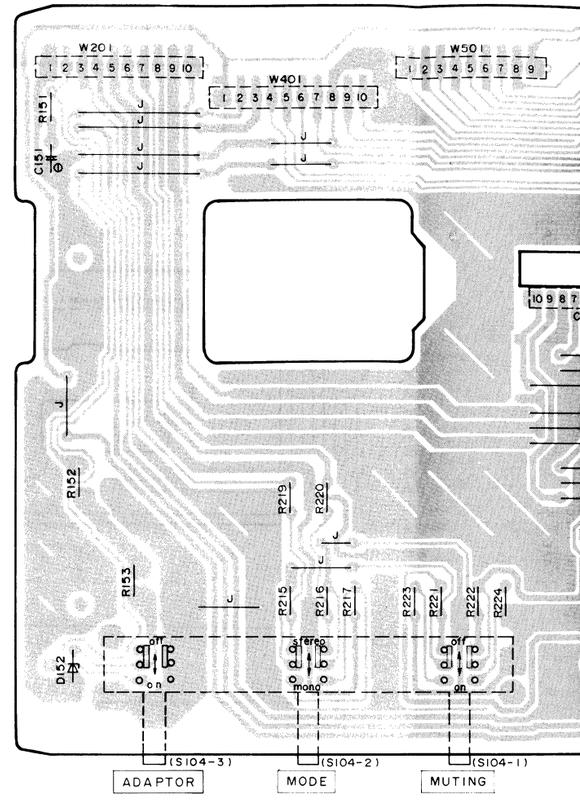

E VOLUME P.C.B. (REPI374A-P···[EB,EG] REPI374B-P···[GN])

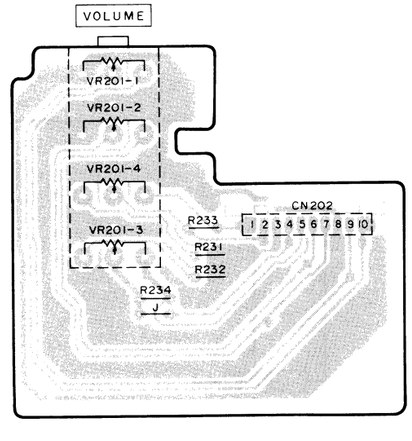

G AC IN/V

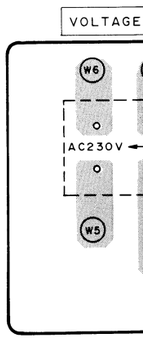

7 8 9 10 11 12 13 14 15 16 17

• This circuit board diagram may be modified at any time with the development of new technology.

D OPERATION P.C.B. (REPI373A-S)

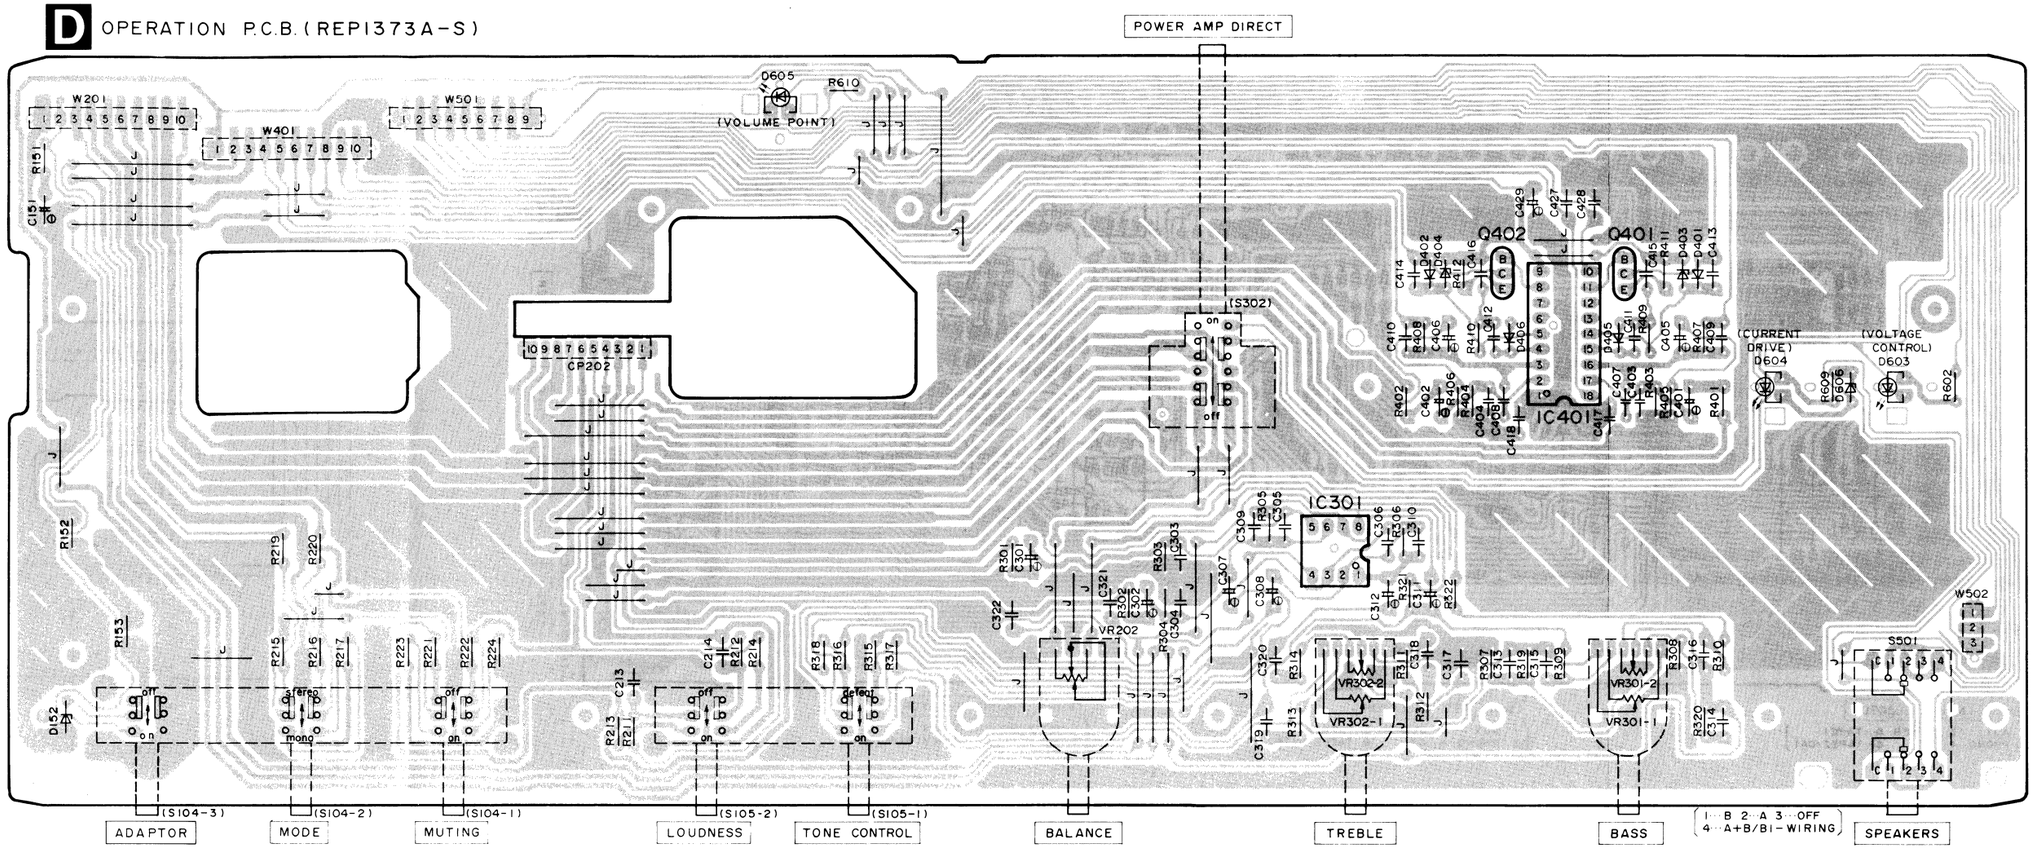

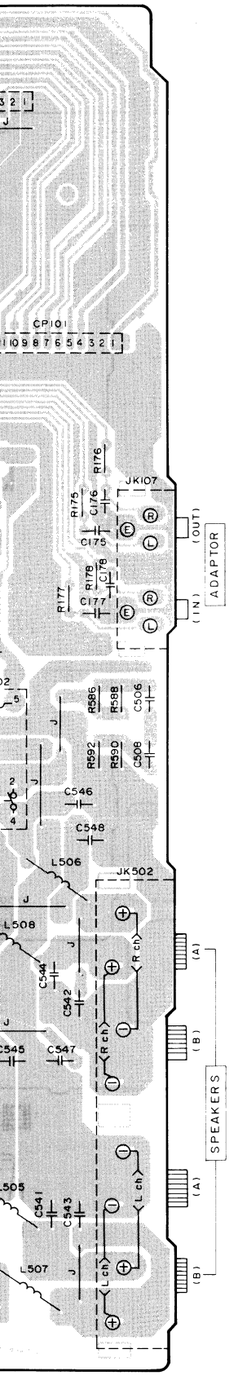

E VOLUME P.C.B. (REPI374A-P···(EB,EG) REPI374B-P···(GN))

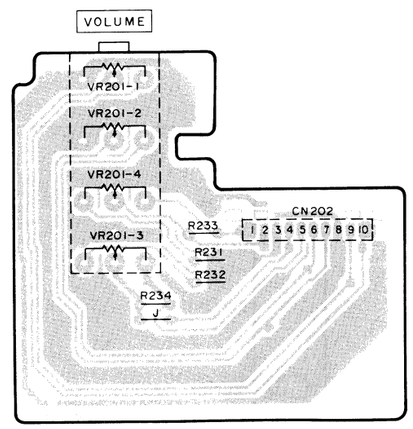

G AC IN/VOLTAGE ADJ. P.C.B. (REPI374A-P···(EB,EG) REPI374B-P···(GN))

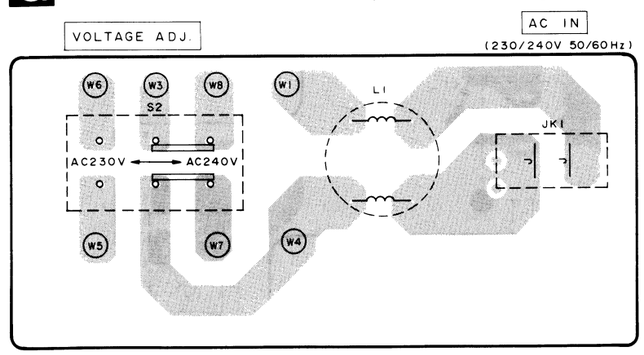

(REPI374A-P···(EB,EG) REPI374B-P···(GN))

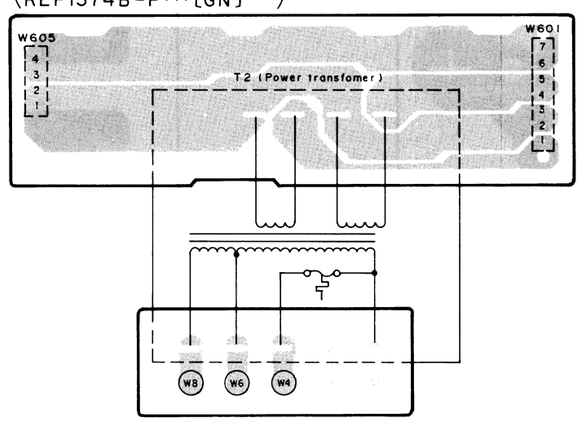

(REPI374A-P···(EB,EG) REPI374B-P···(GN))

(REPI374A-P···(EB,EG) REPI374B-P···(GN))

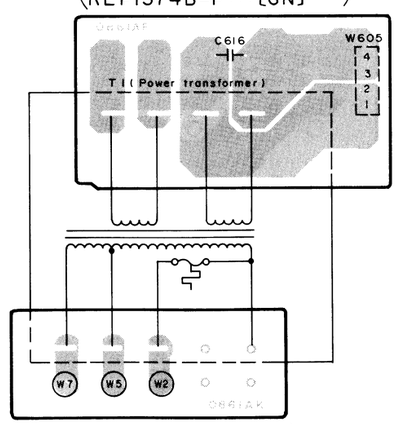

(REPI374A-P···(EB,EG) REPI374B-P···(GN))

■ PRINTED CIRCUIT BOARDS (Parts list on pages 23~26.)

A INPUT SELECTOR P.C.B. (REPI374A-P····[EB,EG] / REPI374B-P····[GN])

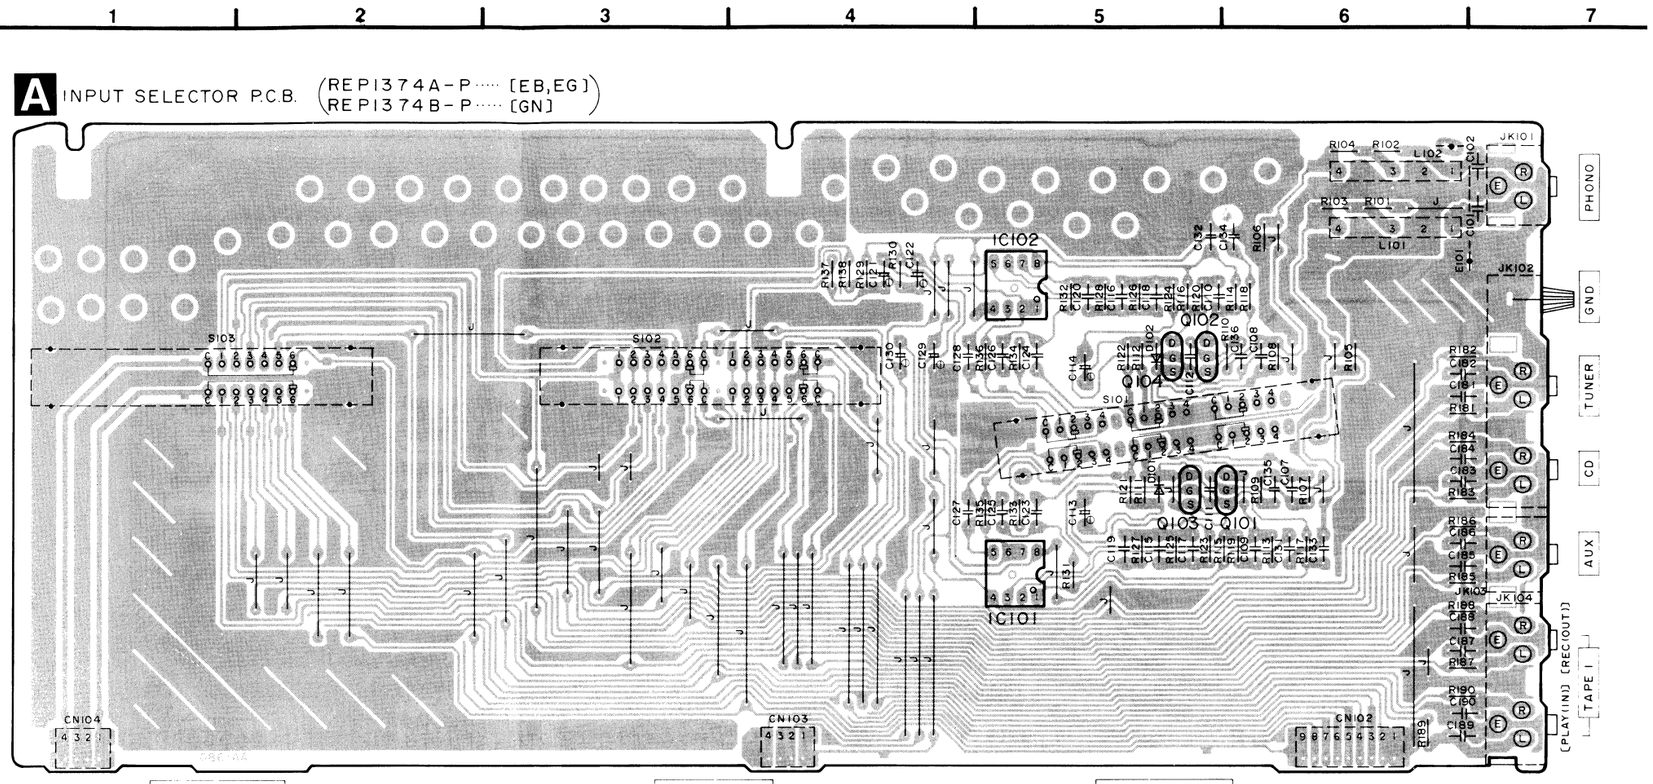

(SI03) INPUT SELECTOR
1···AUX 3···TUNER 5···TAPE1
2···PHONO 4···CD 6···TAPE2/DAT

(SI02) REC SELECTOR
1···AUX 3···TUNER 5···TAPE1▶2/DAT
2···PHONO 4···CD 6···TAPE2/DAT▶1

(SI01) PHONO SELECTOR
1···MC SUBSONIC 3···MM
2···MC 4···MM SUBSONIC

F CAPACITOR BLOCK P.C.B. (REPI374A-P···[EB,EG] / REPI374B-P···[GN])

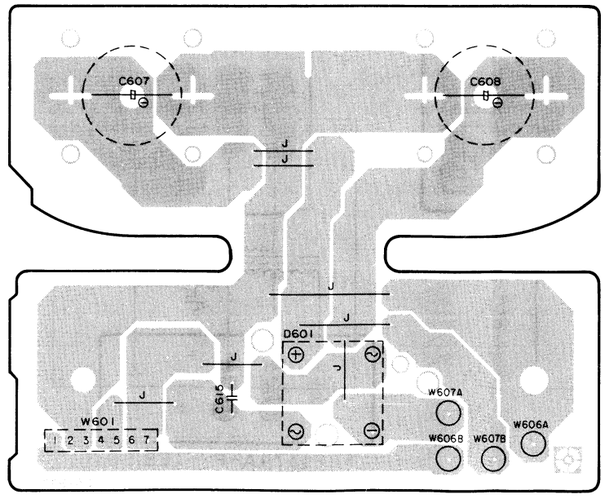

H POWER SWITCH/HEADPHONES JACK P.C.B. (REPI374A-P···[EB,EG] / REPI374B-P···[GN])

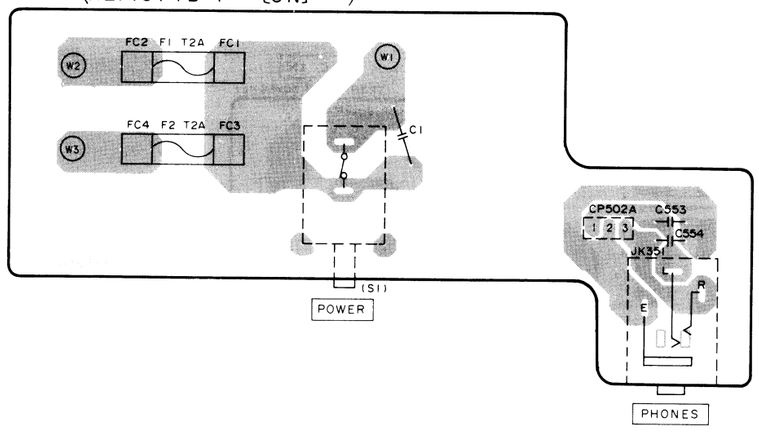

■ WIRING CONNECTION DIAGRAM

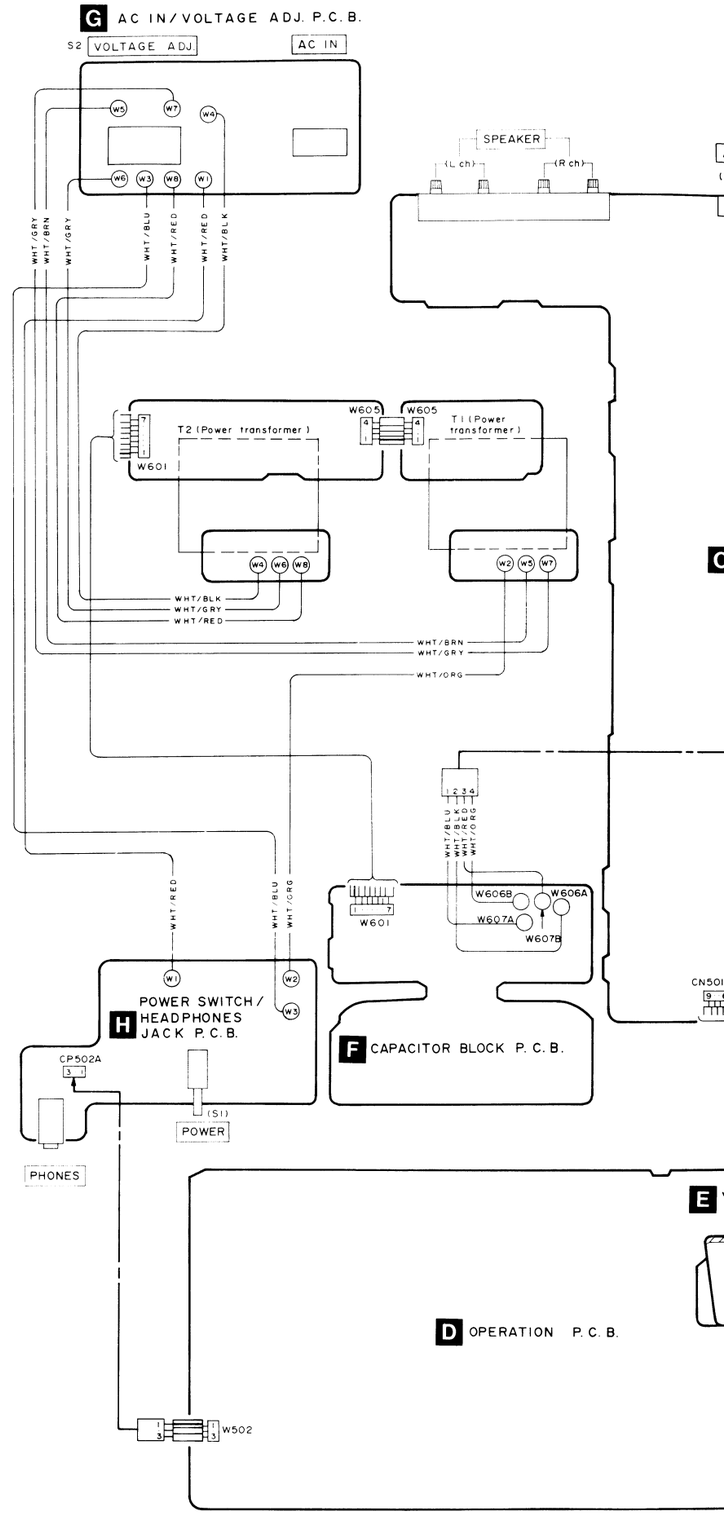

■ WIRING CONNECTION DIAGRAM

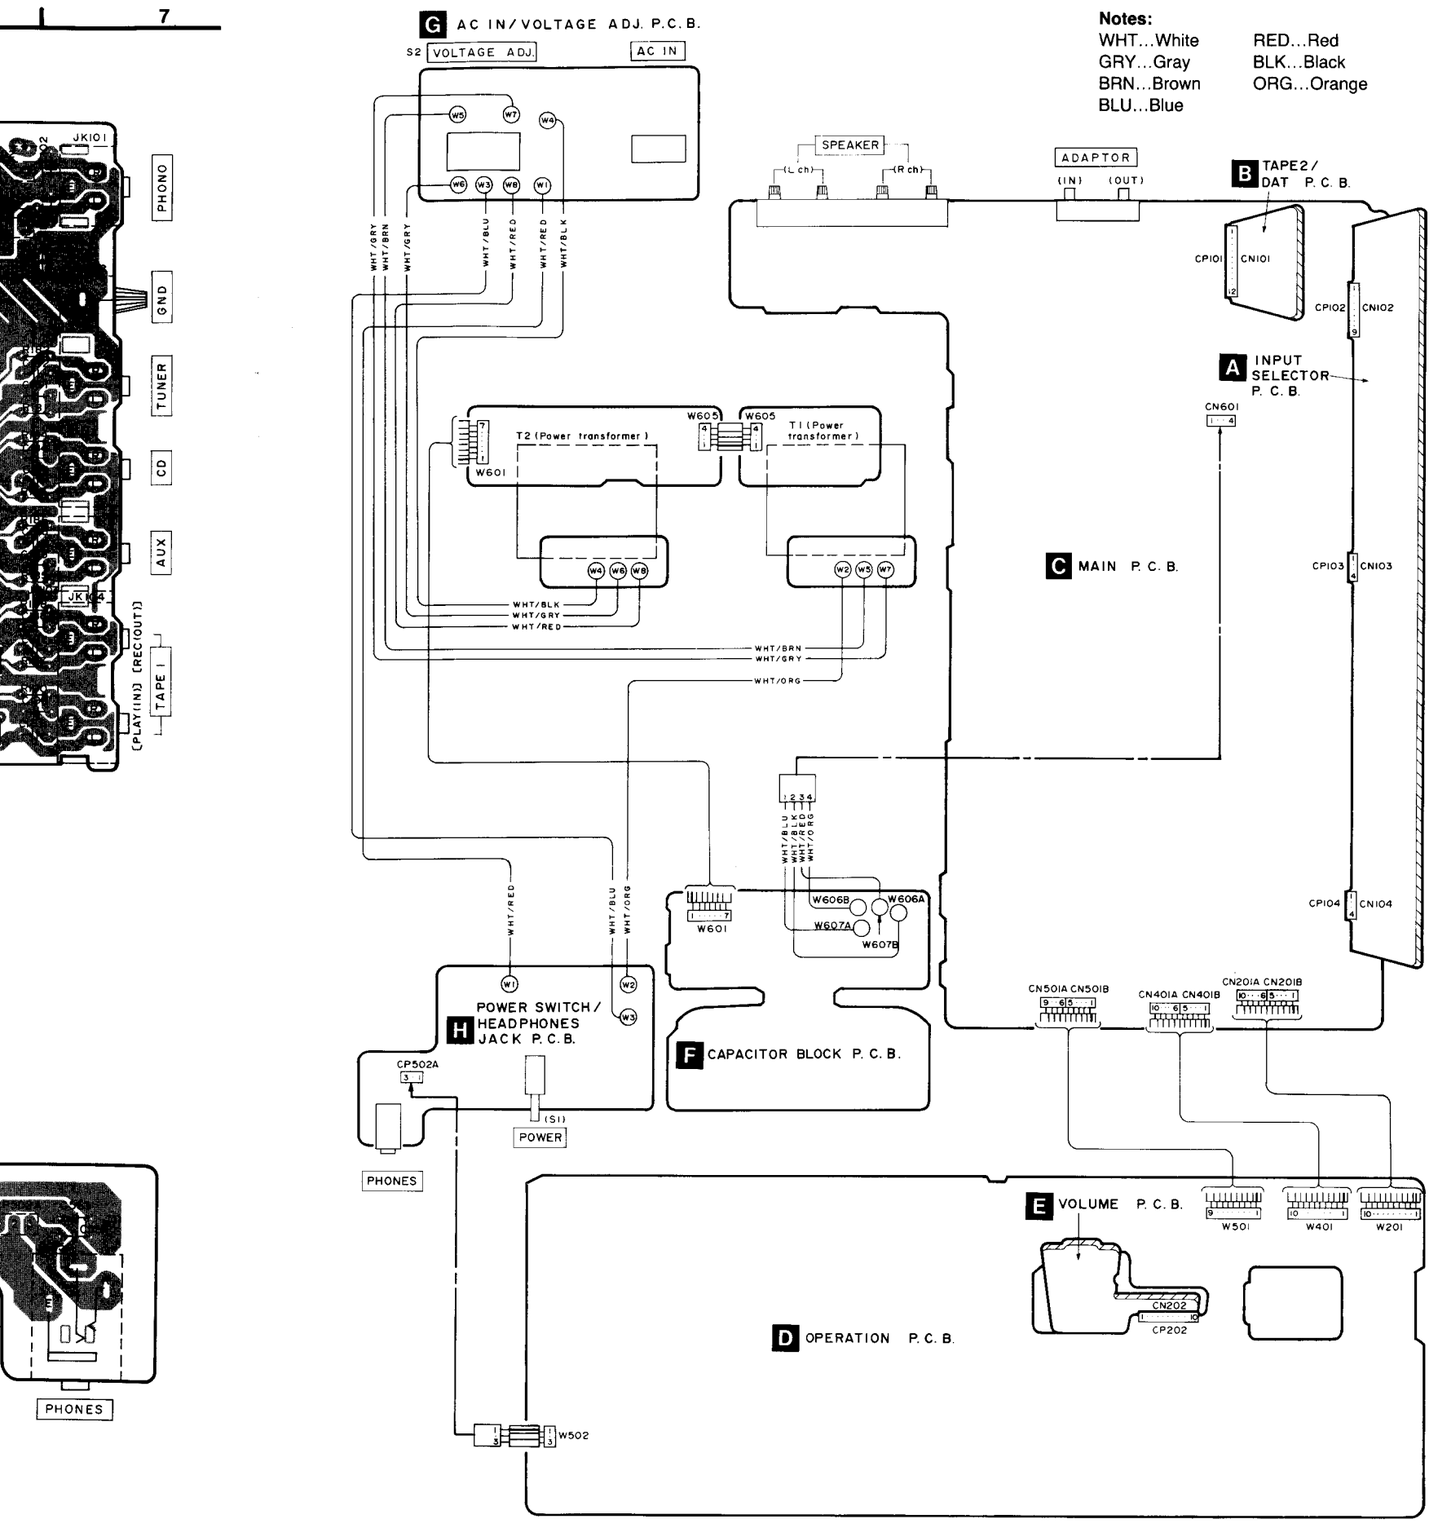

■ REPLACEMENT PARTS LIST

Notes: *Important safety notice:
Components identified by ⚠ mark have special characteristics important for safety.
Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used.
When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.
*The parenthesized indications in the Remarks columns specify the areas. (Refer to the cover page for area.)
Parts without these indications can be used for all areas.

Ref. No.	Part No.	Part Name & Description	Remarks
		INTEGRATED CIRCUIT(S)	
IC101, 102	UPC4570C	I. C, PHONO/EQ. AMP.	
IC301	UPC4570C	I. C, TONE AMP.	
IC401	AN7062N	I. C, VOLTAGE AMP.	
IC501, 502	M5219P	I. C, CASCADE/CURRENT MIRROR	
IC503	AN7073	I. C, PROTECTION	
IC651	M5218AP	I. C, EXTEND ACTIVE SERVO	
		TRANSISTOR(S)	
Q101-104	2SK369GR	TRANSISTOR	
Q401, 402	2SA1123RSTTA	TRANSISTOR	
Q451, 452	2SC2631RSTTA	TRANSISTOR	
Q453, 454	2SC3311A-Q	TRANSISTOR	
Q455, 456	2SA1309A-R	TRANSISTOR	
Q457, 458	2SC2631RSTTA	TRANSISTOR	
Q459, 460	2SA1123RSTTA	TRANSISTOR	
Q461, 462	2SK20130Y	TRANSISTOR	
Q463, 464	2SJ3130Y	TRANSISTOR	
Q465, 466	2SD1761EF	TRANSISTOR	
Q501, 502	2SC3944AQRS	TRANSISTOR	
Q503, 504	2SA1535AQRS	TRANSISTOR	
Q505, 506	2SC3182R	TRANSISTOR	
Q507, 508	2SA1265R	TRANSISTOR	
Q509, 510	2SC1815BG	TRANSISTOR	
Q511, 512	2SA1123RSTTA	TRANSISTOR	
Q513-516	2SC2631RSTTA	TRANSISTOR	
Q517, 518	2SA1123RSTTA	TRANSISTOR	
Q519, 520	2SB1036R	TRANSISTOR	
Q521	2SA992EFPTA	TRANSISTOR	
Q525, 526	2SC3182R	TRANSISTOR	
Q527, 528	2SA1265R	TRANSISTOR	
Q651	2SC3944AQRS	TRANSISTOR	
Q652	2SA1535AQRS	TRANSISTOR	
		DIODE(S)	
D101, 102	MA165	DIODE	
D151	MA165	DIODE	
D152	MA4120	DIODE	
D401, 402	MA167	DIODE	
D403, 404	MA4036MTA	DIODE	
D405, 406	MA165	DIODE	
D451	MA29WA	DIODE	
D453-456	MA165	DIODE	
D457-460	MA4240H	DIODE	
D461-464	MA185TA	DIODE	
D501-504	MA29WA	DIODE	
D505-508	MA4100MTA	DIODE	
D509-511	MA165	DIODE	
D512-514	MA167	DIODE	
D515	MA4160M	DIODE	
D601	SVDS10VB20F	DIODE	⚠
D602	1SR35200TB	DIODE	⚠
D603	LN014304P	L. E. D.	
D604, 605	LN018304P	L. E. D.	
D606	MA4030MTA	DIODE	
D651, 652	MA4180-M	DIODE	
D653	MA165	DIODE	
		VARIABLE RESISTOR(S)	
VR201	RRV18J04A	V. R, VOLUME CONTROL	
VR202	EVJ02QFA2G15	V. R, BALANCE	
VR301, 302	EVJYA1FA2C15	V. R, BASS/TREBLE CONTROL	
VR451, 452	EVNDXAA00B13	V. R, ICQ ADJ. (V-AMP.)	
VR501, 502	EVNDXAA00B52	V. R, ICQ ADJ. (C-AMP.)	
		THERMISTOR(S)	
TH451, 452	ERTD2ZGL251T	THERMISTOR	
TH501, 502	ERTD2ZHL104T	THERMISTOR	
		COIL(S)	
L1	SLQZ650MH49	COIL	⚠
L101, 102	SLM1Z33	COIL	
L501, 502	SLQY07G-40	COIL	
L503, 504	SLQY18G-10	COIL	
L505-508	SLQY07G-40	COIL	
		TRANSFORMER(S)	
T1, 2	RTP1P5E003-W	POWER TRANSFORMER	⚠
		FUSE(S)	
F1, 2	XBA2C20TB0	FUSE, 250V T2.0A	⚠
		SWITCH(ES)	

■ REPLACEMENT PARTS LIST

Notes: *Important safety notice:
Components identified by ⚠ mark have special characteristics important for safety.
Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used.
When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.
*The parenthesized indications in the Remarks columns specify the areas. (Refer to the cover page for area.)
Parts without these indications can be used for all areas.

Ref. No.	Part No.	Part Name & Description	Remarks
		INTEGRATED CIRCUIT(S)	
IC101, 102	UPC4570C	I. C, PHONO/EQ. AMP.	
IC301	UPC4570C	I. C, TONE AMP.	
IC401	AN7062N	I. C, VOLTAGE AMP.	
IC501, 502	M5219P	I. C, CASCADE/CURRENT MIRROR	
IC503	AN7073	I. C, PROTECTION	
IC651	M5218AP	I. C, EXTEND ACTIVE SERVO	
		TRANSISTOR(S)	
Q101-104	2SK369GR	TRANSISTOR	
Q401, 402	2SA1123RSTTA	TRANSISTOR	
Q451, 452	2SC2631RSTTA	TRANSISTOR	
Q453, 454	2SC3311A-Q	TRANSISTOR	
Q455, 456	2SA1309A-R	TRANSISTOR	
Q457, 458	2SC2631RSTTA	TRANSISTOR	
Q459, 460	2SA1123RSTTA	TRANSISTOR	
Q461, 462	2SK20130Y	TRANSISTOR	
Q463, 464	2SJ3130Y	TRANSISTOR	
Q465, 466	2SD1761EF	TRANSISTOR	
Q501, 502	2SC3944AQRS	TRANSISTOR	
Q503, 504	2SA1535AQRS	TRANSISTOR	
Q505, 506	2SC3182R	TRANSISTOR	
Q507, 508	2SA1265R	TRANSISTOR	
Q509, 510	2SC1815BG	TRANSISTOR	
Q511, 512	2SA1123RSTTA	TRANSISTOR	
Q513-516	2SC2631RSTTA	TRANSISTOR	
Q517, 518	2SA1123RSTTA	TRANSISTOR	
Q519, 520	2SB1036R	TRANSISTOR	
Q521	2SA992EFPTA	TRANSISTOR	
Q525, 526	2SC3182R	TRANSISTOR	
Q527, 528	2SA1265R	TRANSISTOR	
Q651	2SC3944AQRS	TRANSISTOR	
Q652	2SA1535AQRS	TRANSISTOR	
		DIODE(S)	
D101, 102	MA165	DIODE	
D151	MA165	DIODE	
D152	MA4120	DIODE	
D401, 402	MA167	DIODE	
D403, 404	MA4036MTA	DIODE	
D405, 406	MA165	DIODE	
D451	MA29WA	DIODE	

Ref. No.	Part No.	Part Name & Description	Remarks
D453-456	MA165	DIODE	
D457-460	MA4240H	DIODE	
D461-464	MA185TA	DIODE	
D501-504	MA29WA	DIODE	
D505-508	MA4100MTA	DIODE	
D509-511	MA165	DIODE	
D512-514	MA167	DIODE	
D515	MA4160M	DIODE	
D601	SVDS10VB20F	DIODE	⚠
D602	1SR35200TB	DIODE	⚠
D603	LN014304P	L. E. D.	
D604, 605	LN018304P	L. E. D.	
D606	MA4030MTA	DIODE	
D651, 652	MA4180-M	DIODE	
D653	MA165	DIODE	
		VARIABLE RESISTOR(S)	
VR201	RRV18J04A	V. R, VOLUME CONTROL	
VR202	EVJ02QFA2G15	V. R, BALANCE	
VR301, 302	EVJYA1FA2C15	V. R, BASS/TREBLE CONTROL	
VR451, 452	EVNDXAA00B13	V. R, ICQ ADJ. (V-AMP.)	
VR501, 502	EVNDXAA00B52	V. R, ICQ ADJ. (C-AMP.)	
		THERMISTOR(S)	
TH451, 452	ERTD2ZGL251T	THERMISTOR	
TH501, 502	ERTD2ZHL104T	THERMISTOR	
		COIL(S)	
L1	SLQZ650MH49	COIL	⚠
L101, 102	SLM1Z33	COIL	
L501, 502	SLQY07G-40	COIL	
L503, 504	SLQY18G-10	COIL	
L505-508	SLQY07G-40	COIL	
		TRANSFORMER(S)	
T1, 2	RTP1P5E003-W	POWER TRANSFORMER	⚠
		FUSE(S)	
F1, 2	XBA2C20TB0	FUSE, 250V T2.0A	⚠
		SWITCH(ES)	

Ref. No.	Part No.	Part Name & Description	Remarks
S1	ESB8249V	SW, POWER	⚠
S2	ESD26200A	SW, VOLTAGE SELECTOR	⚠
S101	RSS4F001-A	SW, PHONO SELECTOR	
S102	RSS6D001	SW, REC. SELECTOR	
S103	RSS6B001	SW, INPUT SELECTOR	
S104	ESB68131	SW, MUTING/MODE/ADAPTOR	
S105	ESB68130	SW, LOUDNESS/TONE	
S302	RSP2D008-A	SW, POWER AMP. DIRECT	
S501	RSR48004-A	SW, SPEAKER SELECTOR	
		CONNECTOR(S)	
CN101	RJU057W012	SOCKET(12P)	
CN102	RJU057W009	SOCKET(9P)	
CN103, 104	RJU057W004	SOCKET(4P)	
CN202	RJU003K010M1	SOCKET(10P)	
CN601	RJP1A3404	PLUG(4P)	
CN201A	RJS1A1705	SOCKET(5P)	
CN401A	RJS1A1705	SOCKET(5P)	
CN501A	RJS1A1704	SOCKET(4P)	
CN201B	RJS1A1705	SOCKET(5P)	
CN401B	RJS1A1705	SOCKET(5P)	
CN501B	RJS1A1705	SOCKET(5P)	
CP101	RJT057W012-1	CONNECTOR(12P)	
CP102	RJT057W009-1	CONNECTOR(9P)	
CP103, 104	RJT057W004-1	CONNECTOR(4P)	
CP202	RJT003K010-1	CONNECTOR(10P)	
CP501	RJR0081	CONNECTOR	
CP502A	RJP3G9YA	CONNECTOR(3P)	
CP502-508	RJR0081	CONNECTOR	
		EARTH TERMINAL(S)	
AZ501, 502	SUS227	TRANSISTOR SPRING	
E101	SMC1009	SHIELD PLATE	
E601	SNE1004-1	GND PLATE	
		FUSE HOLDER(S)	
FC1-4	EYF52BC	FUSE HOLDER	⚠
		RELAY(S)	
RL101	RSYG5A237P12	RELAY	
RL501, 502	RSY0013-0	RELAY	
RL503	RSY0009-0	RELAY	
		JACK(S)	
JK1	SJS9231-1B	AC INLET	⚠(EB, EG)
JK1	SJS9234B	AC INLET	⚠(GN)

Ref. No.	Part No.	Part Name & Description	Remarks
JK101	SJF3068N	PHONO JACK	
JK102	SJF3067N	TUNER/CD JACK	
JK103	SJF3068N	AUX JACK	
JK104	SJF3069N	TAPE 1 JACK	
JK105	SJF3069N	TAPE 2/DAT JACK	
JK106	SJF3068N	POWER AMP DIRECT JACK	
JK107	SJF3069N	ADAPTOR JACK	
JK351	QJA0455ZC-A	HEADPHONES JACK	
JK502	RJH4801-1	SPEAKER TERMINAL	
		TEST POINT	
TP451	SJT3409	TEST POINT	
TP501	SJT3209	TEST POINT	
TP502	SJT3209	TEST POINT	
TP503	SJT3209	TEST POINT	
TP504	SJT3209	TEST POINT	

Notes : * Capacity values are in microfarads (uF) unless specified otherwise, P=Pico-farads(pF) F=Farads(F)
* Resistance values are in ohms, unless specified otherwise, 1K=1,000(OHM) , 1M=1,000k(OHM)

Ref. No.	Part No.	Values & Remarks
		RESISTORS
R101-104	ERDS2TJ102	1/4W 1K
R105, 106	ERDS2TJ473	1/4W 47K
R107, 108	ERDS2TJ221	1/4W 220
R109, 110	ERDS2TJ220T	1/4W 22
R111, 112	ERDS2TJ100	1/4W 10
R113-118	ERDAS3G272T	1/4W 2.7K
R119, 120	ERDS2TJ101	1/4W 100
R121-124	ERDAS3G121	1/4W 120
R125, 126	EROS2TKF5231	1/4W 5.23K
R127, 128	EROS2TKG6802	1/4W 68K
R129, 130	ERDS2TJ334	1/4W 330K
R131, 132	ERDAS3G561	1/4W 560
R133, 134	ERDS2TJ274	1/4W 270K
R135, 136	ERDS2TJ223	1/4W 22K
R137, 138	ERDAS3G471T	1/4W 470
R151	ERDS2TJ680T	1/4W 68
R152, 153	ERG1SJ152E	1W 1.5K
R175-178	ERDAS3G471T	1/4W 470
R181-194	ERDAS3G471T	1/4W 470
R195, 196	ERDLS2VJ471T	1/4W 470
R211, 212	ERDAS3G223T	1/4W 22K
R213, 214	ERDS2TJ183T	1/4W 18K
R215, 216	ERDS2TJ272T	1/4W 2.7K
R217	ERDS2TJ824	1/4W 820K
R219, 220	ERDAS3G471T	1/4W 470
R221, 222	ERDAS3G393T	1/4W 39K
R223, 224	ERDAS3G392T	1/4W 3.9K
R231, 232	ERDAS3G472T	1/4W 4.7K
R233, 234	ERDAS3G124T	1/4W 120K
R301, 302	ERDAS3G561	1/4W 560
R303, 304	ERDS2TJ823T	1/4W 82K
R305, 306	ERDS2TJ224T	1/4W 220K
R307, 308	ERDS2TJ392T	1/4W 3.9K
R309, 310	ERDS2TJ223	1/4W 22K
R311, 312	ERDS2TJ102	1/4W 1K
R313, 314	ERDS2TJ562	1/4W 5.6K
R315, 316	ERDAS3G392T	1/4W 3.9K
R317, 318	ERDAS3G223T	1/4W 22K
R319, 320	ERDS2TJ183T	1/4W 18K
R321, 322	ERDAS3G182	1/4W 1.8K
R401, 402	ERDLS2VJ122T	1/4W 1.2K
R403, 404	ERDS2TJ823T	1/4W 82K
R405, 406	ERDAS3G272T	1/4W 2.7K
R407, 408	ERDAS3G823T	1/4W 82K
R409, 410	ERDS2TJ561	1/4W 560
R411, 412	ERDFS2VJ470T	1/4W 47

Ref. No.	Part No.	Values & Remarks
R437	ERDS2TJ473	1/4W 47K
R439	ERDFS2VJ6R8T	1/4W 6.8
R451, 452	ERDFS2VJ472T	1/4W 4.7K
R453, 454	ERDS2TJ151	1/4W 150
R455, 456	ERDFS2VJ271T	1/4W 270
R457	ERDS2TJ823T	1/4W 82K
R459, 460	ERDFS2VJ101T	1/4W 100
R461-464	ERDS2TJ273	1/4W 27K
R465-468	ERDFS2VJ101T	1/4W 100
R469, 470	ERDFS2VJ182T	1/4W 1.8K
R471-474	ERDFS2VJ2R2T	1/4W 2.2
R501, 502	ERDFS2VJ681T	1/4W 680
R503, 504	ERDFS2VJ121T	1/4W 120
R505, 506	ERDFS2VJ681T	1/4W 680
R507, 508	ERDFS2VJ121T	1/4W 120
R509-512	ERF2EXKR22V	2W 0.22
R513-516	ERDFS2VJ100T	1/4W 10
R517, 518	ERDFS2VJ1R0T	1/4W 1
R519, 520	ERDFS2VJ100T	1/4W 10
R521, 522	ERF2EXKR22V	2W 0.22
R523, 524	ERDFS2VJ332T	1/4W 3.3K
R525, 526	ERDFS2VJ102T	1/4W 1K
R527, 528	ERDFS2VJ332T	1/4W 3.3K
R529, 530	ERDS2TJ104	1/4W 100K
R531, 532	ERDFS2VJ331T	1/4W 330
R533-536	ERDFS2VJ2R2T	1/4W 2.2
R537-540	ERF2EXKR22V	2W 0.22
R541-544	ERDFS2VJ561T	1/4W 560
R545, 546	ERDS2TJ153	1/4W 15K
R547, 548	ERDFS2VJ271T	1/4W 270
R549, 550	ERDFS2VJ472T	1/4W 4.7K
R551	ERDS2TJ473	1/4W 47K
R552	ERDS2TJ563	1/4W 56K
R553	ERDS2TJ153	1/4W 15K
R554	ERDS2TJ103	1/4W 10K
R555	ERDS2TJ563	1/4W 56K
R556	ERDS1FVJ682T	1/2W 6.8K ⚠
R557	ERDS2TJ153	1/4W 15K
R559, 560	ERDS1FVJ100T	1/2W 10 ⚠
R561, 562	ERDS1FVJ561T	1/2W 560 ⚠
R563, 564	ERG1SJ151E	1W 150
R565-568	ERDFS2VJ2R2T	1/4W 2.2
R569	ERDFS2VJ6R8T	1/4W 6.8
R570	ERDS1FVJ272T	1/2W 2.7K ⚠
R571-574	ERDFS2VJ681T	1/4W 680
R575, 576	ERDS2TJ103	1/4W 10K
R577, 578	ERG1SJ181E	1W 180
R579, 580	ERDFS2VJ332T	1/4W 3.3K
R581, 582	ERDS1FVJ561T	1/2W 560 ⚠

Ref. No.	Part No.	Values & Remarks
R585-592	ERG1SJ100E	1W 10
R593-598	ERF2EXKR22V	2W 0.22
R601	ERDS1FVJ180T	1/2W 18 ⚠
R602	ERDS2TJ151	1/4W 150
R603, 604	ERDFS2VJ6R8T	1/4W 6.8
R605, 606	ERDFS2VJ4R7T	1/4W 4.7
R607, 608	ERG1SJ101E	1W 100
R609	ERDS2TJ151	1/4W 150
R610	ERDS2TJ681	1/4W 680
R611-616	ERG1SJ101E	1W 100
R651, 652	ERDS2TJ223	1/4W 22K
R653	ERDS2TJ102	1/4W 1K
R654	ERDS2TJ153	1/4W 15K
R655	ERDS2TJ823T	1/4W 82K
R656	ERDS2TJ153	1/4W 15K
R657, 658	ERDS2TJ102	1/4W 1K
		CAPACITORS
C1	ECKWNS103ZVS	500V 0.01U ⚠
C101, 102	ECBT1H220J5	50V 22P
C107, 108	ECQB1H102JF3	50V 1000P
C109, 110	ECQB1H222JF3	50V 2200P
C111, 112	ECBT1H270J5	50V 27P
C113, 114	ECA0JAP332E	6.3V 3300U
C115, 116	ECQB1H392JF3	50V 3900P
C117, 118	ECQB1H103JF3	50V 0.01U
C119, 120	ECQV1H473JZ3	50V 0.047U
C121, 122	ECA1HPXS010B	50V 1U
C123, 124	ECQB1H472JF3	50V 4700P
C125, 126	ECQV1H564JZ3	50V 0.56U
C127, 128	ECQB1H223JF3	50V 0.022U
C129, 130	ECA1HPXS4R7B	50V 4.7U
C131-134	ECKT1H102KB	50V 1000P
C135, 136	ECBT1H390J5	50V 39P
C151	ECA1CAP470B	16V 47U
C175, 176	ECBT1H181KB5	50V 180P
C177, 178	ECBT1H101KB5	50V 100P
C181-186	ECCR1H101K5	50V 100P
C187, 188	ECCR1H181K5	50V 180P
C189, 190	ECCR1H101K5	50V 100P
C191, 192	ECBT1H181KB5	50V 180P
C193-196	ECCR1H101K5	50V 100P
C213, 214	ECQV1H563JZ3	50V 0.056U
C301, 302	ECA1HPXS3R3B	50V 3.3U
C303, 304	ECBT1H101KB5	50V 100P
C305, 306	ECBT1H820KB5	50V 82P
C307, 308	ECA1HPXS4R7B	50V 4.7U
C309, 310	ECBT1H390J5	50V 39P

Ref. No.	Part No.	Values & Remarks
C311, 312	ECA1CPXS100B	16V 10U
C313, 314	ECQV1H823JZ	50V 0.082U
C315, 316	ECQB1H153JF3	50V 0.015U
C317, 318	ECQB1H183JF3	50V 0.018U
C319, 320	ECQB1H182JF3	50V 1800P
C321, 322	ECQB1H822JF3	50V 8200P
C401, 402	ECA1HPXS3R3B	50V 3.3U
C403, 404	ECBT1H271KB5	50V 270P
C405, 406	ECA1CPXS220B	16V 22U
C407, 408	ECBT1H820KB5	50V 82P
C409, 410	ECBT1H100J5	50V 10P
C411, 412	ECBA1H681KB5	50V 680P
C413, 414	ECCV2H070D	500V 7P
C415-418	ECBT1H102KB5	50V 1000P
C427, 428	ECQB1H223JF3	50V 0.022U
C429	ECA2APXS010B	100V 1U
C451, 452	ECBT1H104ZF5	50V 0.1U
C453-456	ECCV2H680K	500V 68P
C457-460	ECEA1HKA010B	50V 1U
C501-504	ECA0JPXS101B	6.3V 100U
C505-508	ECQM1H224JZ	50V 0.22U
C509, 510	ECQB1H822JF3	50V 8200P
C513-516	ECKR1H473ZF5	50V 0.047U
C517, 518	ECBT1H821KB5	50V 820P
C519-526	ECKR1H103ZF5	50V 0.01U
C527, 528	ECBT1H104ZF5	50V 0.1U
C529	ECA0JAP331B	6.3V 330U
C530	ECFR1E223KR	25V 0.022U
C531	ECEA0JKA470B	6.3V 47U
C532, 533	ECEA1EKA4R7B	25V 4.7U
C541-544	ECCR1H181K5	50V 180P
C545-548	ECQB1H153KF3	50V 0.015U
C549	ECKR1H103ZF5	50V 0.01U
C553, 554	ECBT1H102KB5	50V 1000P
C555-558	ECBA1H681KB5	50V 680P
C603, 604	ECA2APXS101E	100V 100U
C605, 606	ECHR1H103JZ3	50V 0.01U
C607, 608	ECED71M153T	71V 15000U ⚠
C609	ECA1CM221B	16V 220U
C611-614	ECA2APXS010B	100V 1U
C615, 616	ECQE2104KF3	100V 0.1U ⚠
C651-653	ECA1EPXS100B	25V 10U
C654, 655	ECA1HPXS3R3B	50V 3.3U
C656	ECBT1H821KB5	50V 820P
C657, 658	ECKR1H103ZF5	50V 0.01U

■ CABINET PARTS LOCATION

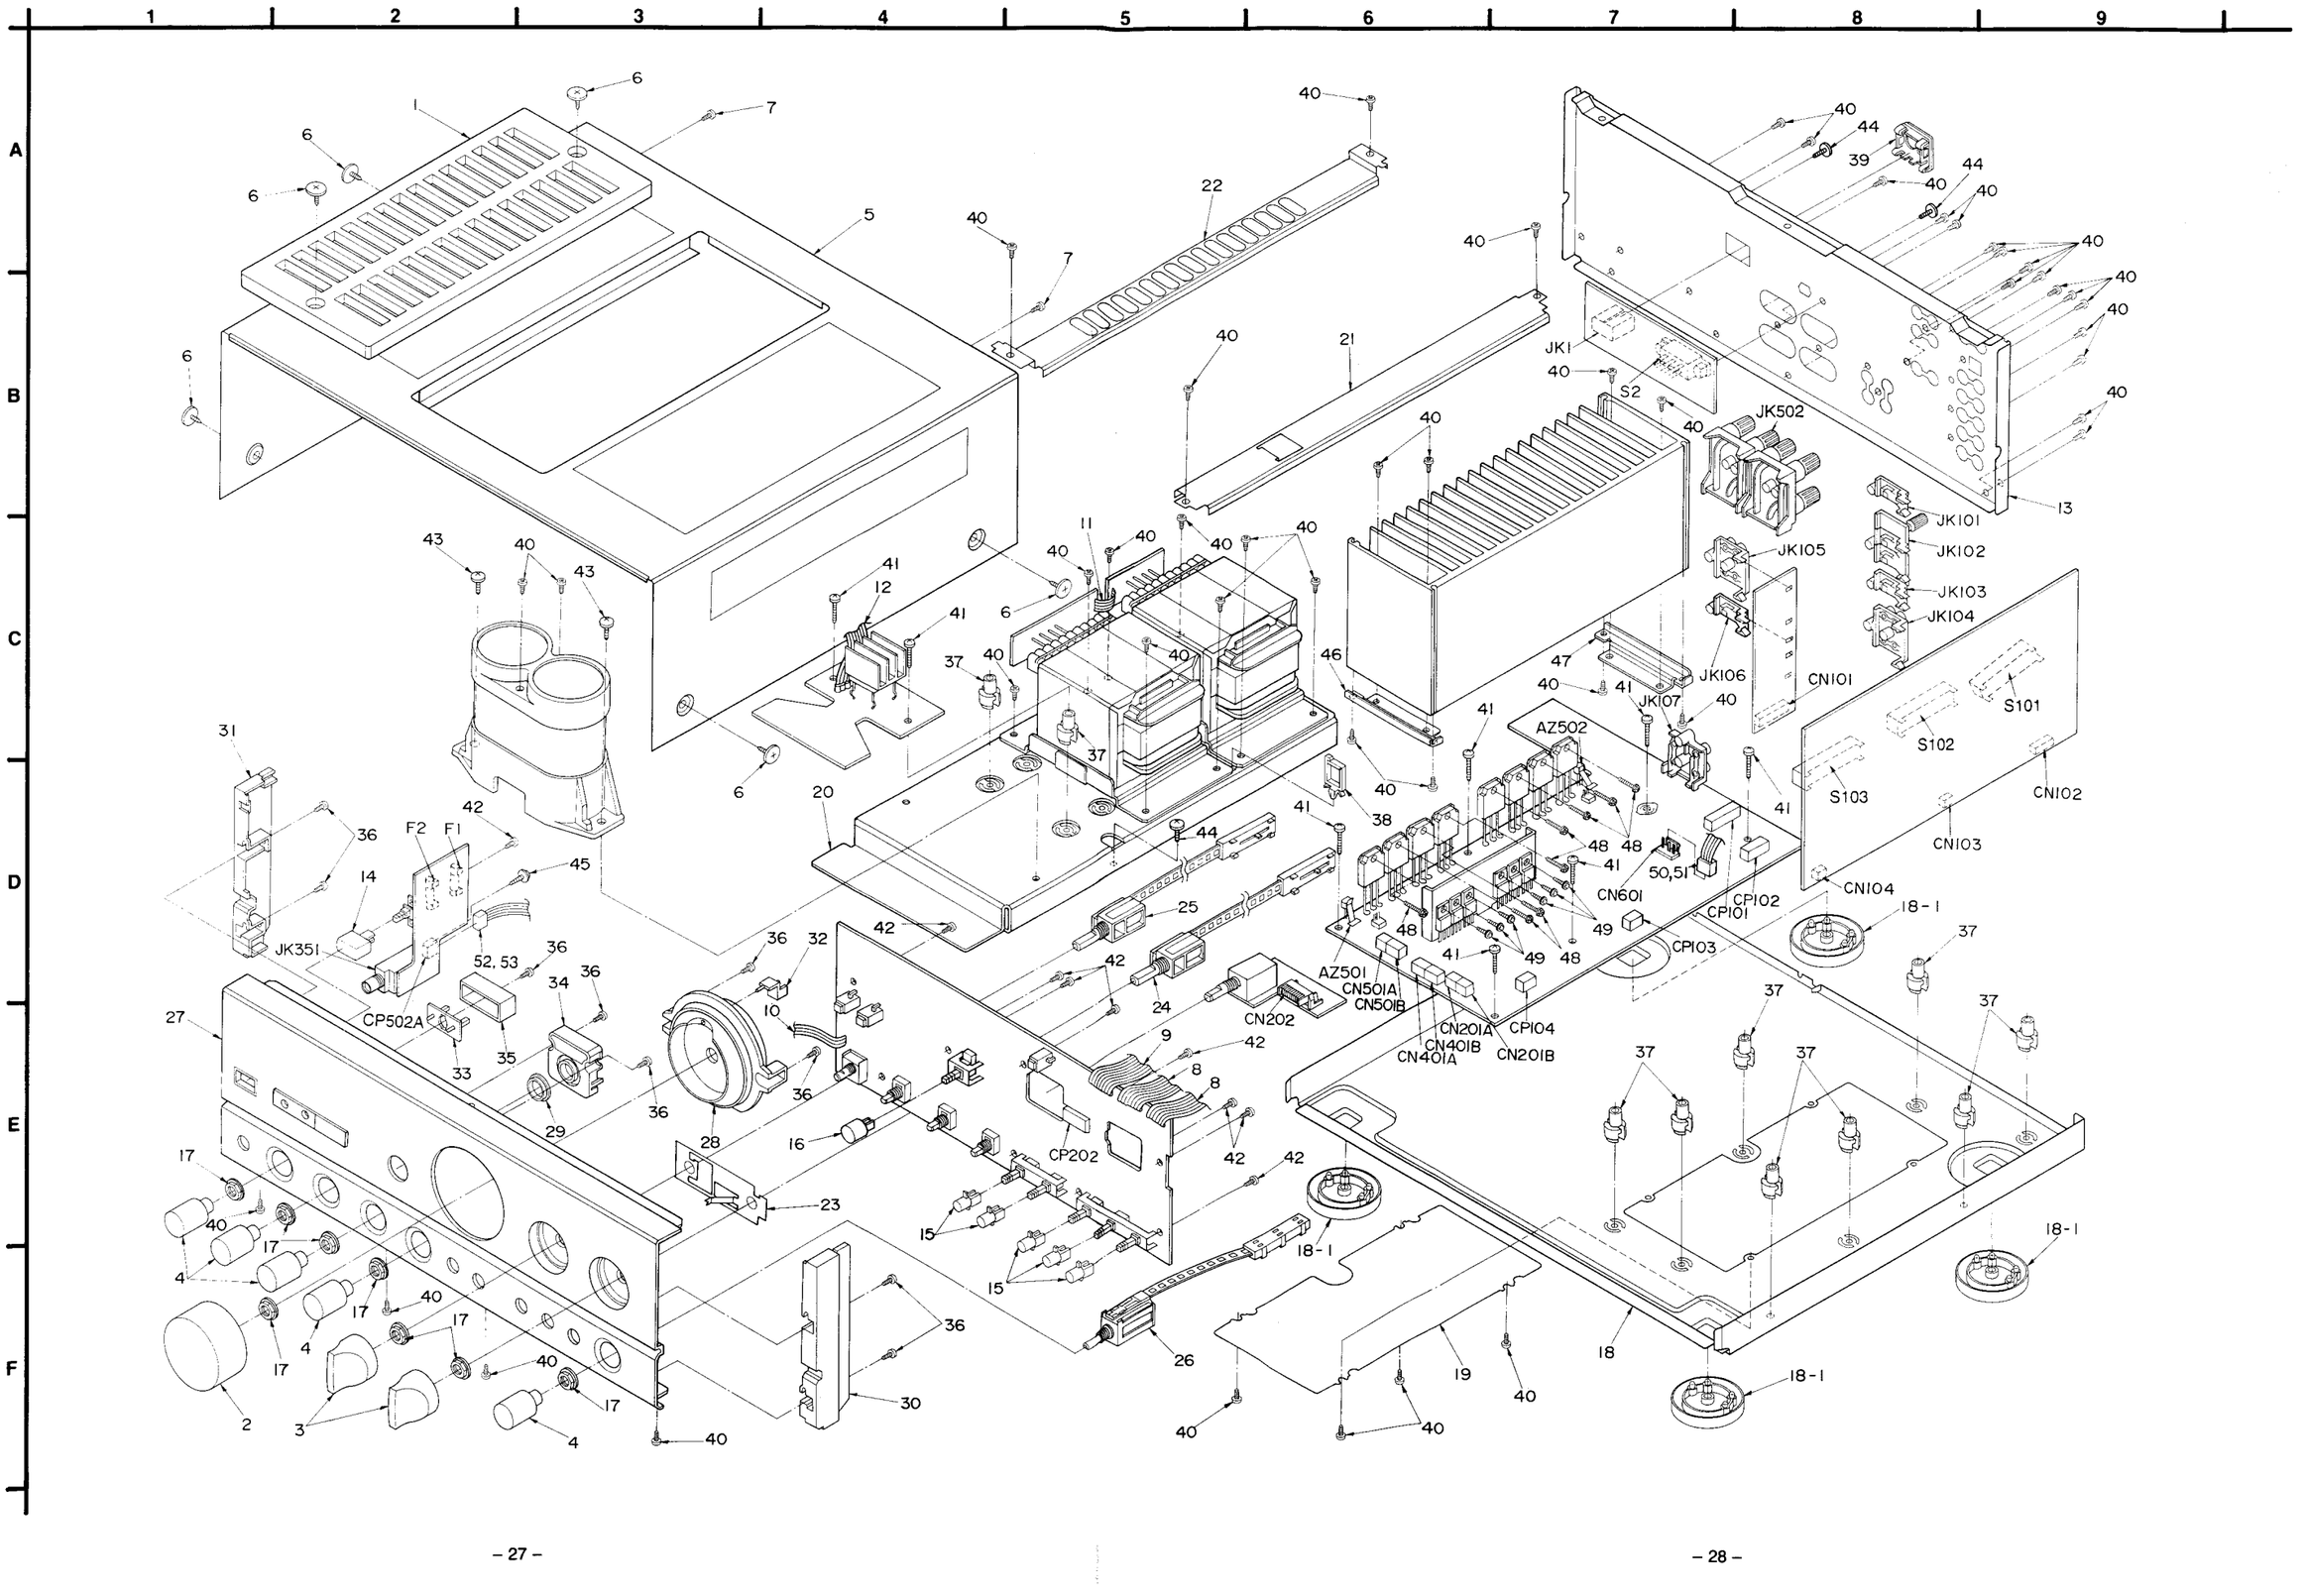

Ref. No.	Part No.	Part Name & Description	Remarks
		CABINET PARTS	
1	RGK0397-K	UPPER PLATE	
2	RGW0122-K	VOLUME KNOB	
3	RGW0123-K	REC. /INPUT KNOB	
4	RGW0150-K	TONE/PHONO/S. P. SELECT KNOB	
5	RKM0172-K	CABINET	
6	SNE2129-3	SCREW	
7	XTBS3+8JFZ1	SCREW	
8	RWJ3910170QQ	FLAT CABLE(10P) (W201, W401)	
9	RWJ3909170QQ	FLAT CABLE(9P) (W501)	
10	RWJ3903070XQ	FLAT CABLE(3P) (W502)	
11	RWJ3904050KK	FLAT CABLE(4P) (W605)	
12	RWJ3907150QQ	FLAT CABLE(7P) (W601)	
13	RGR0124B-AA	REAR PANEL	(EG)
13	RGR0124B-BA	REAR PANEL	(EB, GN)
14	RGU0030	POWER BUTTON	
15	RGU0609-K	LOUDNESS/MUTING/MODE BUTTON	
16	RGU0611-K	DIRECT BUTTON	
17	RHN90001	NUT	
18	RFKJUVX800EK	BOTTOM BOARD ASS'Y	
18-1	RKA0009-1	FOOT	
19	RKU0036	BOTTOM PLATE	
20	RMA0476-2	ANGLE	
21	RMA0584	SIDE ANGLE	
22	RMA0585	CENTER ANGLE	
23	RMQ0255-1	PLATE	
24	RSQ0019	REMOTE SWITCH(INPUT)	
25	RSQ0020	REMOTE SWITCH(REC. SEL.)	
26	RSQ0021	REMOTE SWITCH(PHONO)	
27	RFKGUVX920EG	FRONT PANEL ASS'Y	
28	RGK0393-K	VOLUME ORNAMENT	
29	RGK0394-A	RING	
30	RGK0398-K	SIDE ORNAMENT(R)	
31	RGK0399-K	SIDE ORNAMENT(L)	
32	RGL0136-C1	ORNAMENT	
33	RGL0164-C	ORNAMENT	
34	RMR0460-K	HOLDER	
35	RMR0461-K	HOLDER	
36	XTBS26+8J	SCREW	
37	SHE187-2	P. C. B. SPACER	
38	SHR9814	CLUMPER	
39	SJS9231A	AC INLET COVER	(EG, EB)
39	SJS9234A	AC INLET COVER	(GN)
40	XTBS3+8JFZ1	SCREW	
41	XTB3+20JFZ	SCREW	
42	XTBS26+8J	SCREW	
43	XTB4+10FFZ	SCREW	
44	XTB4+8FFZ	SCREW	
45	XTW3+8T	SCREW	
46	RMQ0239	ANGLE	

Ref. No.	Part No.	Part Name & Description	Remarks
47	RMQ0240	ANGLE	
48	SNE2117-1	SCREW	
49	XTB3+8JFZ	SCREW	
50	RJS1A3404	SOCKET(4P)	
51	RJT053	TERMINAL	
52	SJS5331	SOCKET(3P)	
53	SJT783	TERMINAL	
		PACKING MATERIALS	
P1	RPG1213	PACKING CASE	
P2	RPN0511-1	PAD	
P3	SPH223	PROTECTION SHEET(A)	
P4	SPH6434	PROTECTION SHEET(B)	
P5	RPQ0164	ACCESSORIES BOX	
P6	XZB24X34C04	PROTECTION COVER(ACCESSORY)	
		ACCESSORIES	
A1	RFKSUVX820EG	INSTRUCTIONS MANUAL	(EG)
A1	RQT1486-B	INSTRUCTIONS MANUAL	(EB, GN)
A2	RQA0013	WARRANTY CARD	(EG, EB)
A2	RQX7433ZA	WARRANTY CARD	(GN)
A3	RQCB0169	SERVICE CENTER LIST	
A4	RJA0019-1K	AC POWER SUPPLY CORD	⚠(EG)
A4	SJA193	AC POWER SUPPLY CORD	⚠(EB)
A4	SJA173	AC POWER SUPPLY CORD	⚠(GN)

■ PACKAGING

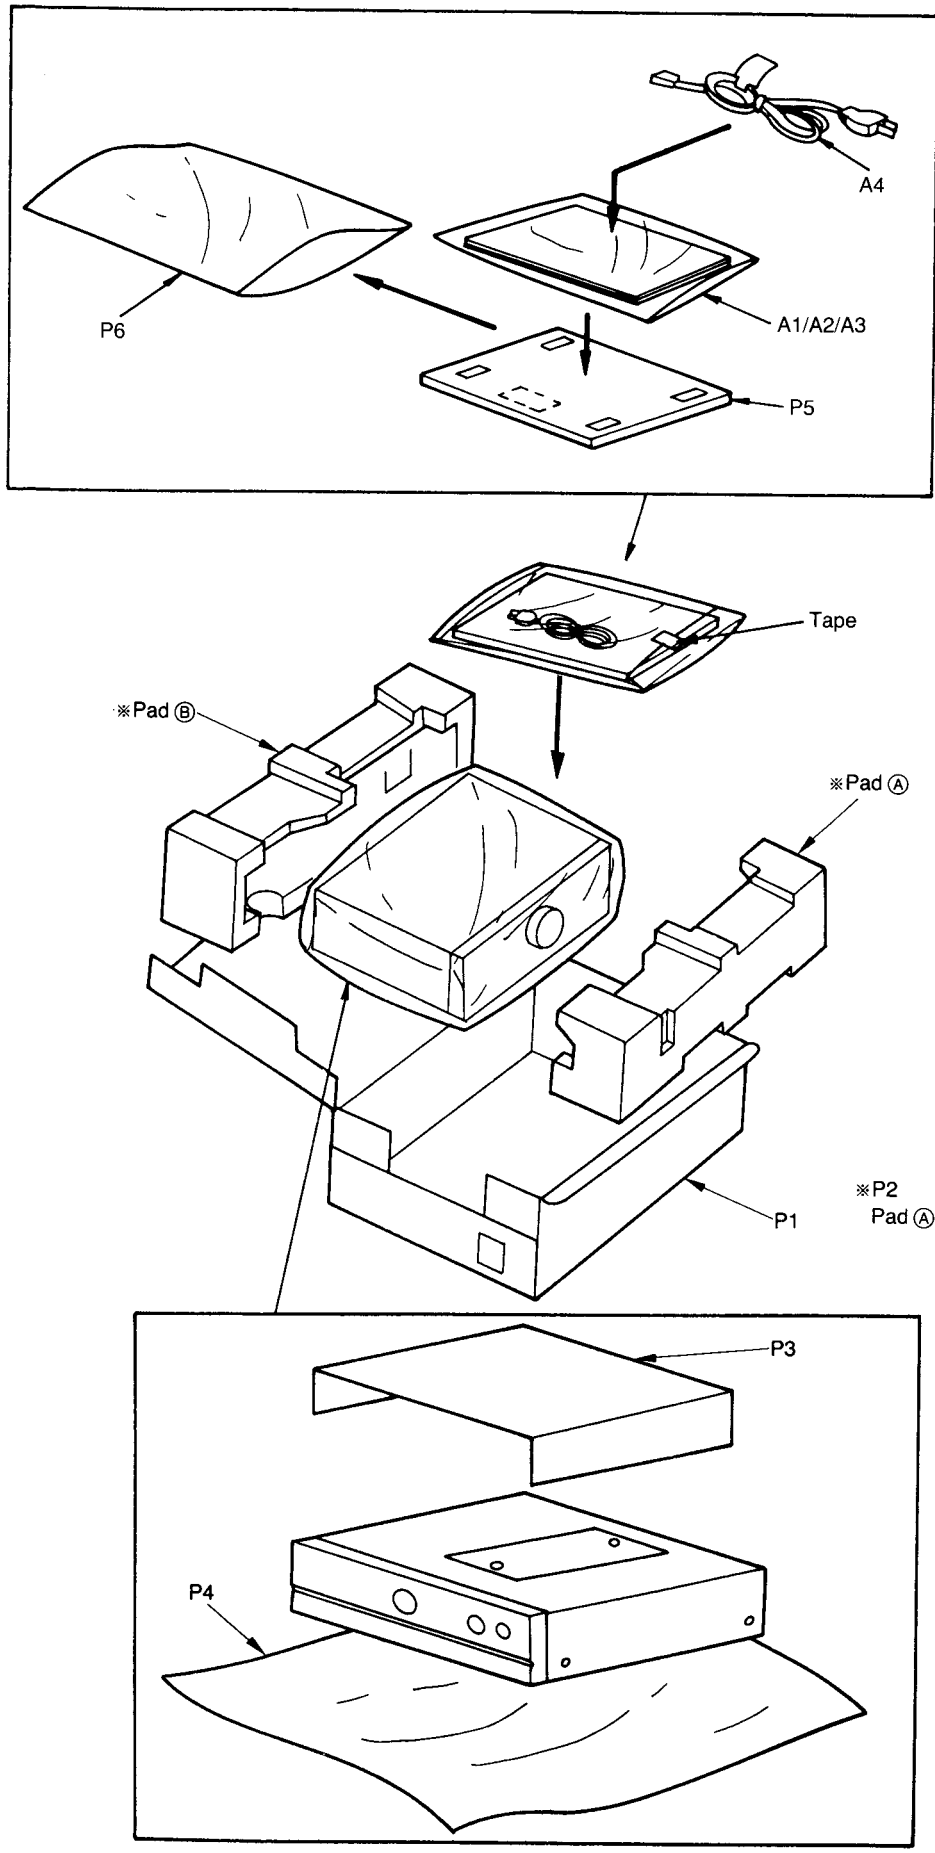

※P2
Pad Ⓐ Ⓑ Ass'y: RPN0511-1

Printed in Japan
F920511400FF/YU/TN